 




CB1:	CIRCUIT BREAKER	DIS:	DOOR MOUNTED KEYPAD
GND:	GROUND LUGS	PB1:	START PUSHBUTTON
LVSS:	RB3 POWER STACK	PB2:	STOP PUSHBUTTON
CT1-3:	CONTROL CARD CT'S	PB3:	RESET PUSHBUTTON
BP1:	ATL/BYPASS CONTACTOR	SW2:	LOCAL-OFF-REMOTE SEL. SWITCH
O/L1:	OVERLOAD RELAY	LT1:	RUNNING PILOT LIGHT
RLY:	SS-ATL RELAY CARD		
SW1:	SS-OFF-ATL SEL. SWITCH (RLY)		
PS1:	PINSTRIP (3 POINT)		
T1:	CONTROL POWER TRANSFORMER		
FU4-5:	PRIMARY FUSING (T1)		
FU6:	SECONDARY FUSE (T1)		
TH1:	THERMOSTAT		
TH2:	SPACE HEATER		



PANEL

RIGHT SIDE

