



Press 📄 to select what needs changed. Use 🦳 🔽 to change values.

To save changes press **D**.



EMX4i Quick Start R2.0 Remote Keypad



Troubleshooting:

- (a) If motor does not start to move as soon as the Start is pushed, increase (2C).
- (b) If motor Starts too fast, decrease (2C) as long as motor does not stall at startup. If still too fast decrease (2D).
- (c) If motor does not reach full speed, increase (2D).

Set Motor Full Load Amps (FLA) *Check motor name plate for FLA and SF.

Press 🔎 then 💟 💟 to Main Menu 🔎 🔎
(2) Parameter 1B = Motor FLA
Press 🦲 or 🔽 to get correct value. Then 🔰 to save
C Exit

(3) Parameter. 1F = Motor Service Factor (S.F.)Press \square or \square to get correct value. Then \square to save

(4) Parameter 2A = Start Mode: Constant Current Press or ∇ to get correct value. Then \sum to save

(5) Parameter **2B** = **Start Ramp Time:** 10 - 15 sec Press \frown or \bigtriangledown to get correct value. Then \triangleright to save

(6) Parameter **2C** = Initial Current: 250% Press \square or \square to get correct value. Then \square to save

(7) Parameter **2D Current Limit:** 400% Press or to get correct value. Then to save

(8) Parameter 2I Stop Mode: Coast to Stop	
Press 🖾 or 💟 to get correct value. Then 🔎 to	save

Exit **I** to main screen. You are now ready for Start/Stop.