

EMX4e

Low Voltage Soft Starter User Guide



BENSHAW

Applied Motor Controls

710-21918-00C

©2022 Benshaw, Inc

Benshaw retains the right to change specifications and illustrations in text without prior notification.
The contents of this document may not be copied without the explicit permission of Benshaw.

Compatibility

This user manual is suitable for use with EMX4e soft starters running user interface software 3.x.

To check the software version, use Setup Tools > Software Versions.

For other versions, contact your local distributor.

Certifications



Contents

1.	About this manual	2	5.9	Serial number and rating.....	36
1.1	Disclaimer	2	5.10	Software versions	37
2.	Caution statements	3	5.11	Thermistor reset	37
2.1	Electrical shock risk	3	5.12	Reset thermal model.....	37
2.2	Unexpected operation.....	4	6.	Logs	38
2.3	Avertissements à l'attention des clients canadiens	5	6.1	Event log	38
3.	System design	7	6.2	Counters	38
3.1	Feature list.....	7	6.3	QR Code	38
3.2	Model code	8	7.	Keypad and Feedback.....	39
3.3	Model selection.....	8	7.1	The keypad.....	39
3.4	Current ratings	9	7.2	Remote keypad	40
3.5	Dimensions and weights	11	7.3	Lighten/darken the display	40
3.6	Physical installation	12	7.4	Starter status LEDs.....	40
3.7	Accessories	12	7.5	Displays.....	41
3.8	Main contactor or circuit breaker ...	13	8.	Operation.....	43
3.9	Power factor correction	14	8.1	Start, stop and reset commands ...	43
3.10	Short circuit protection devices (SCPD)	14	8.2	Command override	43
3.11	IEC coordination with short circuit protection devices	15	8.3	Emergency mode.....	43
3.12	UL coordination with short circuit protection devices	16	8.4	Auxiliary trip	44
3.13	Specifications	20	8.5	Typical control methods	44
3.14	Disposal instructions	21	8.6	Soft start methods.....	46
4.	Installation	22	8.7	Stop methods	49
4.1	Command Source.....	22	9.	Programmable parameters	51
4.2	Setup Procedure Overview	22	9.1	Main menu.....	51
4.3	Inputs.....	23	9.2	Altering parameter values	51
4.4	Outputs	25	9.3	Adjustment lock	51
4.5	Control voltage.....	26	9.4	Parameter list	52
4.6	Power terminations	27	9.5	1 Motor Details	56
4.7	Typical installation	29	9.6	2 Motor Start/Stop.....	57
4.8	Quick setup.....	31	9.7	5 Protection Levels	59
5.	Setup tools.....	32	9.8	6 Protection Action.....	60
5.1	Command source	32	9.9	7 Inputs.....	63
5.2	Commissioning	32	9.10	8 Relay Outputs	66
5.3	Run simulation	32	9.11	9 Analog Output.....	68
5.4	Load/save settings	33	9.12	10 Display.....	69
5.5	USB save and load	34	9.13	12 Communications Card	72
5.6	Network address.....	35	9.14	20 Advanced.....	74
5.7	Digital I/O state	36	9.15	30 Smart Card Parameters	76
5.8	Analog I/O state	36	10.	Troubleshooting	78
			10.1	Protection responses	78
			10.2	Trip messages	78
			10.3	General faults	85

1. About this manual



WARNING

Indicates a hazard that may cause personal injury or death.



CAUTION

Indicates a hazard that may damage the equipment or installation.



NOTE

Provides helpful information.

1.1 Disclaimer

The examples and diagrams in this manual are included solely for illustrative purposes.

The information contained in this manual is subject to change at any time and without prior notice. In no event will responsibility or liability be accepted for direct, indirect or consequential damages resulting from the use or application of this equipment.

2. Caution statements

Caution Statements cannot cover every potential cause of equipment damage but can highlight common causes of damage. It is the installer's responsibility to read and understand all instructions in this manual prior to installing, operating or maintaining the equipment, to follow good electrical practice including applying appropriate personal protective equipment and to seek advice before operating this equipment in a manner other than as described in this manual.



NOTE

The soft starter is not user serviceable. The unit should only be serviced by authorised service personnel. **Unauthorised tampering with the unit will void the product warranty.**



FOR YOUR SAFETY

- The STOP function of the soft starter does not isolate dangerous voltages from the output of the starter. The soft starter must be disconnected by an approved electrical isolation device before accessing electrical connections.
- Soft starter protection features apply to motor protection only. It is the user's responsibility to ensure safety of personnel operating machinery.
- The soft starter is a component designed for integration within an electrical system; it is therefore the responsibility of the system designer/user to ensure the system is safe and designed to comply with relevant local safety standards.

2.1 Electrical shock risk



WARNING – ELECTRICAL SHOCK HAZARD

The voltages present in the following locations can cause severe electric shock and may be lethal:

- AC supply cables and connections
- Output cables and connections
- Many internal parts of the starter



SHORT CIRCUIT

The soft starter is not short circuit proof. After severe overload or short circuit, the operation of the soft starter should be fully tested by an authorised service agent.



GROUNDING AND BRANCH CIRCUIT PROTECTION

It is the responsibility of the user or person installing the soft starter to provide proper grounding and branch circuit protection according to local electrical safety codes.

2.2 Unexpected operation



WARNING – ACCIDENTAL STARTS

In some installations, accidental starts may pose an increased risk to safety of personnel or damage to the machines being driven. In such cases, it is recommended that the power supply to the soft starter is fitted with an isolating switch and a circuit-breaking device (eg power contactor) controllable through an external safety system (eg emergency stop, fault detector).



WARNING – STARTER MAY START OR STOP UNEXPECTEDLY

The soft starter will respond to control commands from various sources, and could start or stop unexpectedly. Always disconnect the soft starter from mains voltage before accessing the starter or load.



WARNING – DISCONNECT MAINS BEFORE ACCESSING STARTER OR LOAD

The soft starter has built-in protections which can trip the starter in the event of faults and thus stop the motor. Voltage fluctuations, power cuts and motor jams may also cause the motor to trip.

The motor could restart after the causes of shutdown are rectified, which may be dangerous for personnel. Always disconnect the soft starter from mains voltage before accessing the starter or load.



CAUTION – MECHANICAL DAMAGE FROM UNEXPECTED RESTART

The motor could restart after the causes of shutdown are rectified, which may be dangerous for certain machines or installations. In such cases, it is essential that appropriate arrangements are made against restarting after unscheduled stops of the motor.

2.3 Avertissements à l'attention des clients canadiens



AVERTISSEMENT

L'icône AVERTISSEMENT ci-contre signale les informations concernant des risques pouvant entraîner des blessures graves, voire mortelles. Pour votre sécurité, veuillez consulter les avertissements sur cette page ou demander une copie du présent manuel en français auprès de votre distributeur local.



AVERTISSEMENT – RISQUE DE CHOC ÉLECTRIQUE

Les zones suivantes sont soumises à des tensions pouvant provoquer des risques de chocs électriques graves, voire mortels :

- Raccordement et câbles d'alimentation AC
- Câbles et raccordements de sortie
- De nombreuses pièces internes du démarreur



PAR SÉCURITÉ

- La fonction STOP du démarreur progressif n'isole pas des tensions dangereuses de la sortie du démarreur. Le démarreur progressif doit être déconnecté par un dispositif d'isolement électrique approprié avant d'accéder aux connexions électriques.
- Les fonctions de protection du démarreur progressif ne concernent que la protection du moteur. Il relève de la responsabilité de l'utilisateur d'assurer la sécurité des personnes travaillant sur les machines.
- Le démarreur progressif est un appareil conçu pour s'intégrer dans un système électrique ; il relève donc de la responsabilité du concepteur ou de l'utilisateur de veiller à ce que ce système soit sûr et conçu selon les normes de sécurité locales en vigueur.



AVERTISSEMENT – DÉMARRAGES ACCIDENTELS

Dans certaines installations, des démarrages accidentels peuvent provoquer un risque supplémentaire pour la sécurité des personnes ou endommager les machines contrôlées. Dans de tels cas, il est recommandé de doter l'alimentation du démarreur progressif d'un interrupteur d'isolement et d'un coupe-circuit (par exemple, un disjoncteur) contrôlable à partir d'un système de sécurité externe (par exemple, un arrêt d'urgence, un détecteur de défaut).



AVERTISSEMENT – LE DÉMARREUR PEUT DÉMARRER OU S'ARRÊTER À TOUT MOMENT

L'EMX4e répond aux commandes de contrôle de différentes origines et peut par conséquent démarrer ou s'arrêter à tout moment. Toujours déconnecter le démarreur de la tension secteur avant d'accéder au démarreur ou à la charge.



AVERTISSEMENT – DÉCONNECTER L'ALIMENTATION PRINCIPALE AVANT D'ACCÉDER AU DÉMARREUR OU À LA CHARGE

Le démarreur progressif comporte des protections intégrées qui peuvent déclencher des mises en sécurité dans l'éventualité de défauts et ainsi arrêter le moteur. Des fluctuations de tension, des coupures d'alimentation et des blocages du moteur peuvent produire des mises en sécurité de celui-ci.

Le moteur pourrait redémarrer une fois que les causes de l'arrêt ont été résolues, ce qui pourrait mettre en danger le personnel. Toujours déconnecter le démarreur de la tension secteur avant d'accéder au démarreur ou à la charge.



AVERTISSEMENT

Ne pas appliquer la tension du secteur au démarreur tant que tout le câblage n'est pas terminé.



AVERTISSEMENT

Toujours appliquer la tension de commande avant (ou en même temps que) la tension secteur.



AVERTISSEMENT

Si l'entrée de démarrage est fermée lorsque la tension de commande est appliquée, le démarreur tentera d'effectuer un démarrage.

Vérifier que l'entrée de démarrage/arrêt est ouverte avant d'appliquer la tension de commande.

3. System design

3.1 Feature list

Streamlined setup process

- Configuration profiles for common applications
- Built-in metering and inputs/outputs

Easy to understand interface

- Multi-language menus and displays
- Descriptive option names and feedback messages
- Real-time performance graphs

Supports energy efficiency

- IE3 compatible
- 99% energy efficient when running
- Internal bypass
- Soft start technology avoids harmonic distortion

Extensive range of models

- 24 A~580 A (nominal)
- 200~525 VAC
- 380~600 VAC

Versatile starting and stopping options

- Adaptive Control
- Constant Current
- Current Ramp
- Timed voltage ramp soft stop
- Coast To Stop

Customisable protection

- Motor overload
- Excess Start Time
- Undercurrent
- Overcurrent
- Current imbalance
- Input Trip
- Motor thermistor


Extensive input and output options

- Remote control inputs
(2 x fixed, 2 x programmable)
- Relay outputs
(1 x fixed, 2 x programmable)
- Analog output

Optional features for advanced applications

- Smart cards
- Communication options:
DeviceNet, Ethernet/IP, Modbus
RTU, Modbus TCP, Profibus,
Profinet

3.2 Model code

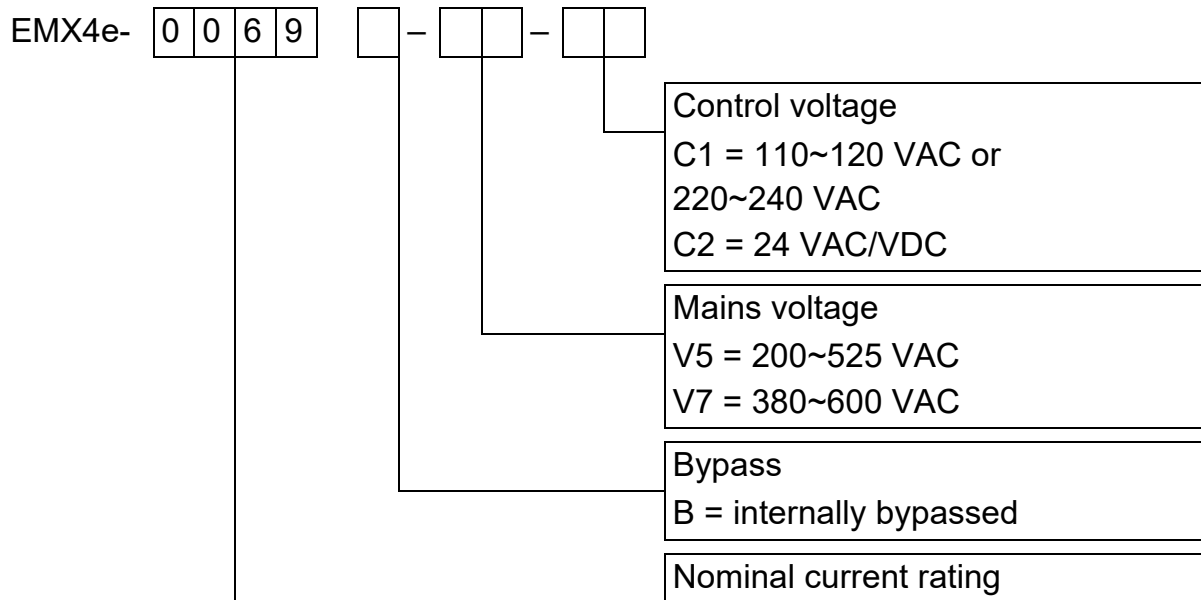

3.3 Model selection

Starter sizing

The soft starter must be the correct size for the motor and the application.

Select a soft starter that has a current rating at least equal to the motor's full load current (nameplate) rating, at the start duty.

The soft starter's current rating determines the maximum motor size it can be used with. The soft starter's rating depends on the number of starts per hour, the length and current level of the start, and the amount of time the soft starter will be off (not passing current) between starts.

The soft starter's current rating is only valid when used in the conditions specified in the AC53 code. The current rating may be higher or lower in different operating conditions.


3.4 Current ratings

For operating conditions not covered by these ratings charts, contact your local supplier.

IEC ratings

- AC53b format**

80 A : AC-53b 3.5 - 15 : 345

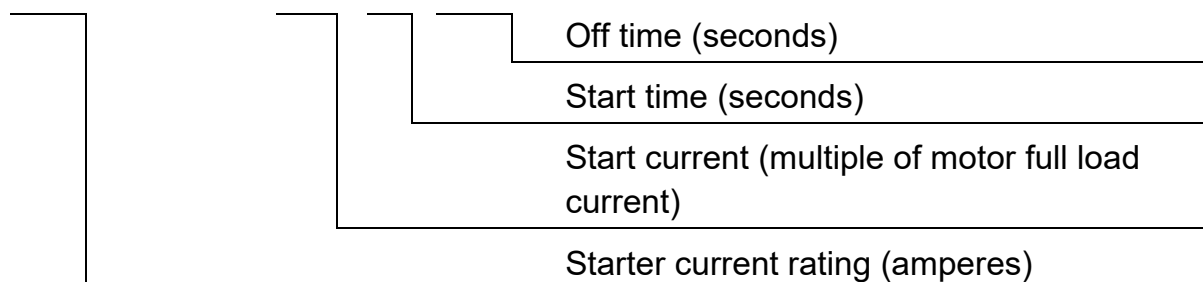

- Ratings**

All ratings are calculated at altitude of 1000 metres and ambient temperature of 40 °C.


	3.0-10:350	3.5-15:345	4.0-10:350	4.0-20:340	5.0-5:355
EMX4e-0024B	24	20	19	16	17
EMX4e-0042B	42	34	34	27	32
EMX4e-0052B	52	42	39	35	34
	3.0-10:590	3.5-15:585	4.0-10:590	4.0-20:580	5.0-5:595
EMX4e-0064B	64	63	60	51	54
EMX4e-0069B	69	69	69	62	65
EMX4e-0105B	105	86	84	69	77
EMX4e-0115B	115	108	105	86	95
EMX4e-0135B	135	129	126	103	115
EMX4e-0184B	184	144	139	116	127
EMX4e-0200B	200	171	165	138	150
EMX4e-0229B	229	194	187	157	170
EMX4e-0250B	250	244	230	200	202
EMX4e-0352B	352	287	277	234	258
EMX4e-0397B	397	323	311	263	289
EMX4e-0410B	410	410	410	380	400
EMX4e-0550B	550	527	506	427	464
EMX4e-0580B	580	579	555	470	508

NEMA motor ratings

All ratings are calculated at altitude of 1000 metres and ambient temperature of 50 °C.


Light 300%, 10 s, 6 starts per hour					Normal 350%, 30 s, 4 starts per hour				Heavy 450%, 30 s, 4 starts per hour			
	A	HP @230 VAC	HP @460 VAC	HP @575 VAC	A	HP @230 VAC	HP @460 VAC	HP @575 VAC	A	HP @230 VAC	HP @460 VAC	HP @575 VAC
EMX4e-0024B	24	7.5	15	20	17	5	10	15	14	3	10	10
EMX4e-0042B	42	15	30	40	28	10	20	25	22	7.5	15	20
EMX4e-0052B	52	15	30	50	35	10	25	30	28	10	20	25
EMX4e-0064B	64	20	40	60	52	15	40	40	40	10	25	30
EMX4e-0069B	69	25	50	60	59	20	40	50	46	15	30	40
EMX4e-0105B	100	30	75	100	77	25	60	60	52	15	40	50
EMX4e-0115B	115	40	75	100	81	30	60	75	65	20	50	60
EMX4e-0135B	135	50	100	125	99	30	75	100	77	25	60	75
EMX4e-0184B	164	60	125	150	124	40	100	100	96	30	75	75
EMX4e-0200B	200	75	150	200	131	50	100	125	104	40	75	100
EMX4e-0229B	229	75	150	200	156	60	125	150	124	40	100	100
EMX4e-0250B	250	100	200	250	195	75	150	200	156	60	125	150
EMX4e-0352B	341	125	250	350	240	75	200	200	180	60	150	150
EMX4e-0397B	389	150	300	400	261	100	200	250	203	75	150	200
EMX4e-0410B	410	150	300	450	377	150	300	350	302	100	250	300
EMX4e-0550B	550	200	450	500	414	150	350	450	321	125	250	300
EMX4e-0580B	580	200	500	500	477	200	400	500	361	150	300	350

3.5 Dimensions and weights

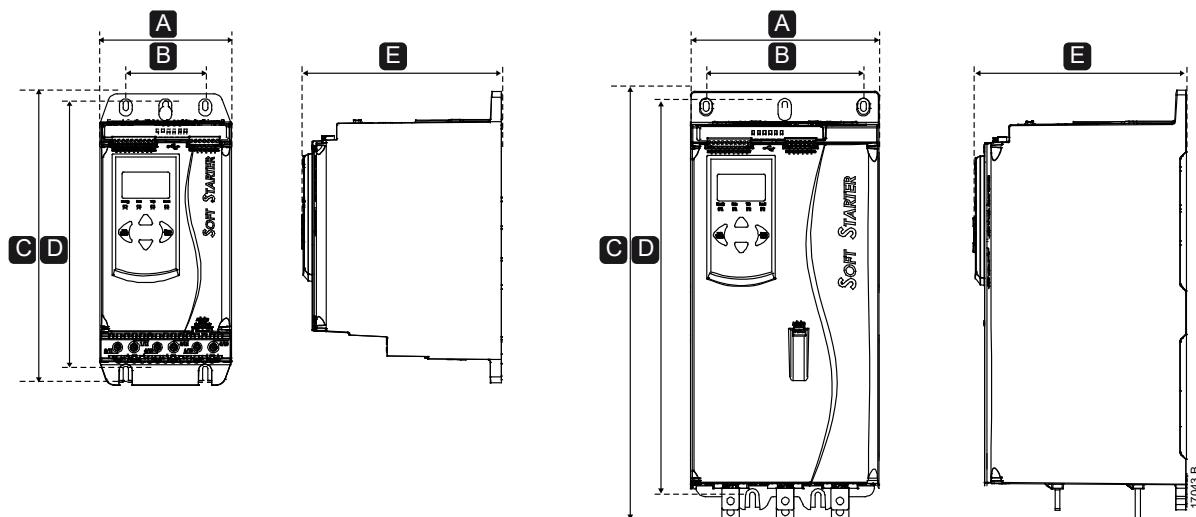

	Width mm (inch)		Height mm (inch)		Depth mm (inch)	Weight kg (lb)		
	A	B	C	D	E			
EMX4e-0024B	152 (6.0)	92 (3.6)	336 (13.2)	307 (12.1)	231 (9.1)	4.7 (10.4)		
EMX4e-0042B								
EMX4e-0052B								
EMX4e-0064B						4.8 (10.7)		
EMX4e-0069B								
EMX4e-0105B								
EMX4e-0115B						5.0 (11.0)		
EMX4e-0135B								
EMX4e-0184B	216 (8.5)	180 (7.1)	495 (19.5)	450 (17.7)	243 (9.6)	11.7 (25.8)		
EMX4e-0200B								
EMX4e-0229B								
EMX4e-0250B								
EMX4e-0352B			523 (20.6)			12.5 (27.6)		
EMX4e-0397B								
EMX4e-0410B								
EMX4e-0550B						15.0 (33.1)		
EMX4e-0580B								

3.6 Physical installation

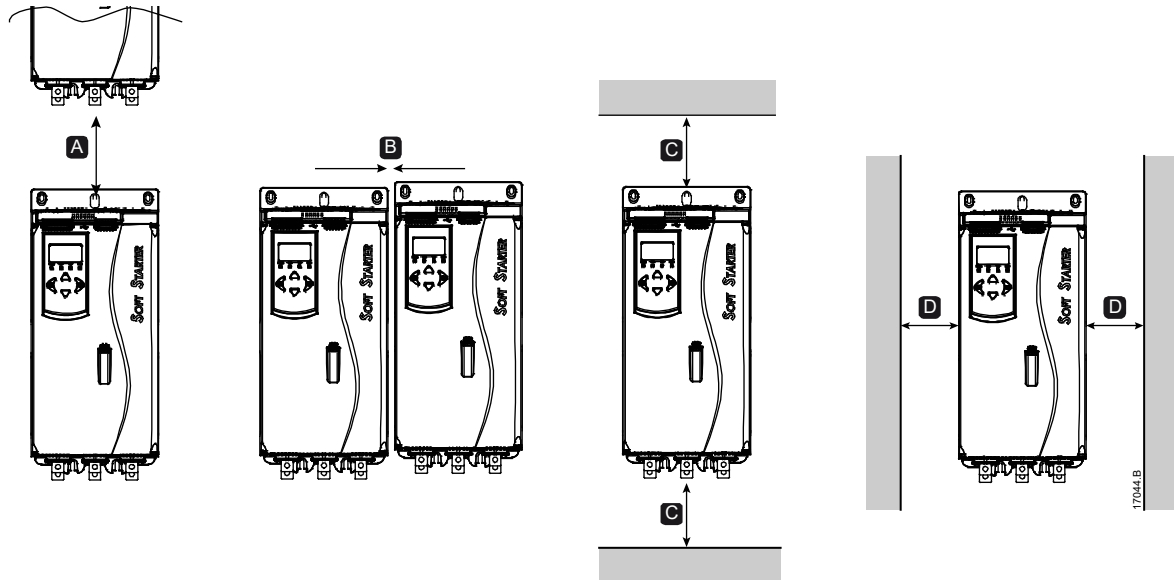

Between starters		Solid surfaces	
A	B	C	D
> 100 mm (3.9 inch)	> 10 mm (0.4 inch)	> 100 mm (3.9 inch)	> 10 mm (0.4 inch)

3.7 Accessories

Expansion cards

The EMX4e offers expansion cards for users requiring additional inputs and outputs or advanced functionality. Each EMX4e can support a maximum of one expansion card.

- **Smart card**

The smart card has been designed to support integration with pumping applications and provides the following additional inputs and outputs:

- 3 x digital inputs
- 3 x 4-20 mA transducer inputs
- 1 x RTD input
- 1 x USB-B port
- Remote keypad connector

- **Communication expansion cards**

The EMX4e supports network communication via easy-to-install communications expansion cards. Each communications card includes a remote keypad connector port.

Available protocols:

DeviceNet, Ethernet/IP, Modbus RTU, Modbus TCP, Profibus, Profinet.

- **Ground fault protection**

The EMX4e can detect ground current and trip before the equipment is damaged.

Ground fault protection requires a 1000:1 or 2000:1 current transformer (not supplied). The CT should be rated for 1 VA or 5 VA. Ground fault protection is available as an option with specific versions of the Modbus RTU, Modbus TCP, Ethernet/IP and Profinet expansion cards.

Remote keypad

The soft starter can be used with a remote keypad, mounted up to 3 metres away from the starter. Each expansion card includes a keypad connection port, or a dedicated keypad connector card is available.

Finger guard kit

Finger guards may be specified for personnel safety. Finger guards fit over the soft starter terminals to prevent accidental contact with live terminals. Finger guards provide IP20 protection when used with cable of diameter 22 mm or greater.

Finger guards are compatible with models EMX4e-0184B ~ EMX4e-0580B.

Soft starter management software

PC software can provide real-time or offline management of soft starters.

- For real-time management in a network of up to 254 starters, the software must connect to the soft starter via a Modbus TCP or Modbus RTU card. The software can monitor, control and program the starter across the network.
- The software can be used to program the starter via the USB port on the pumping smart card.
- For offline management, a configuration file generated in the software can be loaded into the starter via the USB port.

3.8 Main contactor or circuit breaker

A main contactor or circuit breaker should be installed with the soft starter.


- A main contactor is recommended to protect the soft starter from voltage disturbances on the network, while stopped. Select a contactor with an AC3 rating greater than or equal to the full load current rating of the connected motor.
- Use a shunt trip circuit breaker to isolate the motor circuit in the event of a soft starter trip. The shunt trip mechanism must be powered from the supply side of the circuit breaker or from a separate control supply.

Use the main contactor output (33, 34) to control the main contactor.

3.9 Power factor correction

If power factor correction is used, a dedicated contactor should be used to switch in the capacitors.

To use the EMX4e to control power factor correction, connect the PFC contactor to a programmable relay set to Run. When the motor reaches full speed, the relay will close and power factor correction will be switched in. Do not use the soft starter relay output to directly switch in power factor correction.

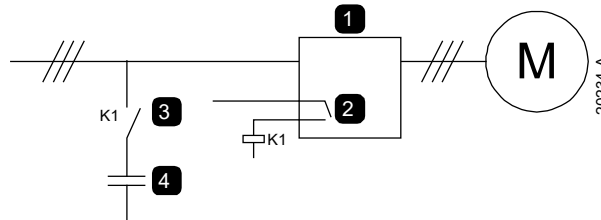

1	Soft starter
2	Programmable output (set = Run)
3	Power factor correction contactor
4	Power factor correction



CAUTION

Power factor correction capacitors must be connected to the input side of the soft starter. Connecting power factor correction capacitors to the output side will damage the soft starter.

3.10 Short circuit protection devices (SCPD)

Fuses may be installed to protect the soft starter or the installation.

Type 1 Coordination

Type 1 coordination requires that, in the event of a short circuit on the output side of a soft starter, the fault must be cleared without risk of injury to personnel. There is no requirement that the soft starter must remain operational after the fault.

HRC fuses (such as Ferraz/Mersen AJT fuses) can be used for Type 1 coordination according to IEC 60947-4-2 standard.

Type 2 Coordination

Type 2 coordination requires that in the event of a short circuit on the output side of a soft starter, the fault must be cleared without risk of injury to personnel or damage to the soft starter.

Semiconductor fuses for Type 2 circuit protection are additional to HRC fuses or MCCBs that form part of the motor branch circuit protection.

**CAUTION**

Integral solid state short circuit protection does not provide branch circuit protection. Branch circuit protection must be provided in accordance with the National Electrical Code and any additional local codes.

3.11 IEC coordination with short circuit protection devices

These fuses were selected based on start current of 300% FLC for 10 seconds.

	Nominal Rating (A)	SCR I²t (A²s)	Type 1 coordination 480 VAC, 65 kA Bussmann NH fuse links	Type 2 coordination 600 VAC, 65 kA Bussmann DIN 43 653
EMX4e-0024B	24	1150	40NHG000B	170M3010
EMX4e-0042B	42	7200	63NHG000B	170M3013
EMX4e-0052B	52		80NHG000B	
EMX4e-0064B	64	15000	100NHG000B	170M3014
EMX4e-0069B	69			
EMX4e-0105B	105	80000	160NHG00B	170M3015
EMX4e-0115B	115			170M3016
EMX4e-0135B	135	125000		
EMX4e-0184B	184	320000	250NHG2B	170M3020
EMX4e-0200B	200		315NHG2B	
EMX4e-0229B	229			
EMX4e-0250B	250			
EMX4e-0352B	352	202000	355NHG2B	170M6009
EMX4e-0397B	397		400NHG2B	
EMX4e-0410B	410	320000	425NHG2B	170M6010
EMX4e-0550B	550	781000	630NHG3B	170M6012
EMX4e-0580B	580			

3.12 UL coordination with short circuit protection devices

Standard fault short circuit

Suitable for use on a circuit capable of delivering up to the stated fault current, 600 VAC maximum, when protected by any UL listed fuses or circuit breakers sized according to the NEC.

Model	Nominal Rating (A)	3 cycle short cct rating @600 VAC
EMX4e-0024B	24	5 kA
EMX4e-0042B	42	
EMX4e-0052B	52	10 kA
EMX4e-0064B	64	
EMX4e-0069B	69	
EMX4e-0105B	105	
EMX4e-0115B	120	
EMX4e-0135B	135	
EMX4e-0184B	184	18 kA
EMX4e-0200B	225	
EMX4e-0229B	229	
EMX4e-0250B	250	
EMX4e-0352B	352	
EMX4e-0397B	397	
EMX4e-0410B	410	30 kA
EMX4e-0550B	550	
EMX4e-0580B	580	

High fault short circuit

- Maximum fuse rating (A) – High fault short circuit current**

Suitable for use on a circuit capable of delivering up to the stated fault current, 480 VAC maximum, when protected by fuses of the stated class and rating.

Model	Nominal rating (A)	Short circuit rating @ 480 VAC max.	Listed fuse rating (A)	Fuse class
EMX4e-0024B	24	65 kA	30	Any (J, T, K-1, RK1, RK5)
EMX4e-0042B	42		50	
EMX4e-0052B	52		60	
EMX4e-0064B	64		80	
EMX4e-0069B	69		80	
EMX4e-0105B	105		125	J, T, K-1, RK1
EMX4e-0115B	120		125	
EMX4e-0135B	135		150	
EMX4e-0184B	184		200	J, T
EMX4e-0200B	225		225	
EMX4e-0229B	229		250	
EMX4e-0250B	250		300	
EMX4e-0352B	352		400	Any (J, T, K-1, RK1, RK5)
EMX4e-0397B	397		450	
EMX4e-0410B	410		450	
EMX4e-0550B	550		600	
EMX4e-0580B	580		600	

• Circuit breakers – High fault short circuit current

Suitable for use on a circuit capable of delivering up to the stated fault current, 480 VAC maximum, when protected by the specified circuit breaker models.

- Circuit breakers with model codes beginning HFD/HJD/HKD/HLD are from Eaton.
- Circuit breakers with model codes beginning SELA/SFLA/SGLA are from GE.
- Circuit breakers with model codes beginning R2CB are from Benshaw.
- Circuit breakers with model codes beginning UTS are from LS Electric. For LS breakers, xx represents FM, FT or AT

Model	Nominal rating (A)	Fault current 65 kA
		Circuit breaker (rating, A)
EMX4e-0024B	24	HFD3030 (30 A) SELA36AT0060 (60 A) R2CB-40A-150F-xx-HF-FTU (40 A) UTS150H-xxU-040 (40 A)
EMX4e-0042B	42	HFD3050 (50 A) SELA36AT0060 (60 A) R2CB-50A-150F-xx-HF-FTU (50 A) UTS150H-xxU-050 (50 A)
EMX4e-0052B	52	HFD3060 (60 A) SELA36AT0060 (60 A) R2CB-60A-150F-xx-HF-FTU (60 A) UTS150H-xxU-060 (60 A)
EMX4e-0064B	64	HFD3100 (100 A) SELA36AT0150 (150 A) R2CB-100A-150F-xx-HF-FTU (100 A) UTS150H-xxU-100 (100 A)
EMX4e-0069B	69	
EMX4e-0105B	105	HFD3125 (125 A) SELA36AT0150 (150 A) R2CB-125A-150F-xx-HF-FTU (125 A) UTS150H-xxU-125 (125 A)
EMX4e-0115B	120	
EMX4e-0135B	135	HFD3150 (150 A) SELA36AT0150 (150 A) R2CB-150A-150F-xx-HF-FTU (150 A) UTS150H-xxU-150 (150 A)
EMX4e-0184B	184	HJD3250 (250 A) SFLA36AT0250 (250 A) R2CB-250A-250F-xx-HF-FTU (250 A) UTS250H-xxU-250 (250 A)
EMX4e-0200B	225	
EMX4e-0229B	229	

Model	Nominal rating (A)	Fault current 65 kA
		Circuit breaker (rating, A)
EMX4e-0250B	250	HKD3300 (300 A) SGLA36AT0400 (400 A) R2CB-300A-400F-xx-HF-FTU (300 A) UTS400H-xxU-300 (300 A)
EMX4e-0352B	352	HLD3400 (400 A)
EMX4e-0397B	397	SGLA36AT0600 (600 A) R2CB-400A-400F-xx-HF-FTU (400 A) UTS400H-xxU-400 (400 A)
EMX4e-0410B	410	HLD3600 (600 A) SGLA36AT0600 (600 A) R2CB-600A-600F-xx-HF-FTU (600 A) UTS600H-xxU-600 (600 A)
EMX4e-0550B	550	HLD3600 (600 A)
EMX4e-0580B	580	SGLA36AT0600 (600 A) R2CB-800A-800F-xx-HF-NGx (800 A) UTS800H-NGx-800 (800 A)

3.13 Specifications

Supply

Mains voltage (L1, L2, L3)	
EMX4e-xxxxB-V5	200~525 VAC ($\pm 10\%$)
EMX4e-xxxxB-V7	380~600 VAC ($\pm 10\%$)
Control voltage (A1, A2, A3)	
EMX4e-xxxxB-xx-C1 (A1, A2)	110~120 VAC (+10%/-15%), 600 mA
EMX4e-xxxxB-xx-C1 (A2, A3)	220~240 VAC (+10%/-15%), 600 mA
EMX4e-xxxxB-xx-C2 (A1, A2)	24 VAC/VDC ($\pm 20\%$), 2.8 A
Mains frequency	50 Hz~60 Hz (± 5 Hz)
Rated insulation voltage to earth	600 VAC
Rated impulse withstand voltage	6 kV
Form designation	
..... Bypassed or continuous, semiconductor motor starter form 1	

Short circuit capability

Coordination with semiconductor fuses	Type 2
Coordination with HRC fuses	Type 1

Electromagnetic capability (compliant with EU Directive 2014/35/EU)

EMC Immunity	IEC 60947-4-2
EMC Emissions	IEC 60947-4-2 Class B

Inputs

Input rating	Active 24 VDC, 8 mA approx
Motor thermistor (B4, B5)	Trip >3.6 k Ω , reset <1.6 k Ω

Outputs

Relay outputs	10 A @ 250 VAC resistive, 5A @ 250 VAC AC15 pf 0.3
Main contactor/Shunt relay (33, 34)	Normally Open
Relay output A (41, 42, 44)	Changeover
Relay output B (53, 54)	Normally Open
Analog output (21, 22)	
Maximum load	600 Ω (12 VDC @ 20 mA)
Accuracy	$\pm 5\%$

Environmental

Operating temperature	-10 °C~60 °C, above 40 °C with derating
Storage temperature	-25 °C~+ 60 °C
Operating Altitude	0~1000 m, above 1000 m with derating
Humidity	5%~95% Relative Humidity
Pollution degree	Pollution Degree 3
Vibration	IEC 60068-2-6

Protection	
EMX4e-0024B~EMX4e-0135B	IP20
EMX4e-0184B~EMX4e-0580B	IP00

Heat dissipation

During Start	4.5 watts per ampere
During Run	
EMX4e-0024B~EMX4e-0052B	≤ 35 watts approx
EMX4e-0064B~EMX4e-0135B	≤ 50 watts approx
EMX4e-0184B~EMX4e-0250B	≤ 120 watts approx
EMX4e-0352B~EMX4e-0580B	≤ 140 watts approx

Motor Overload Protection

Default: The default settings of parameters 1C, 1D and 1E provide Motor Overload Protection: Class 10, Trip Current 105% of FLA (full load amperage) or equivalent.


Certification

CCC	GB 14048.6
CE	EN 60947-4-2
C-UL CAN/CSA-C22.2 N° 60947-1-13, CAN/CSA-C22.2 N° 60947-4-2-14	
UL	UL 60947-4-2
RCM	IEC 60947-4-2

Operational life (internal bypass contacts)

.....	100 000 operations
-------	--------------------

3.14 Disposal instructions

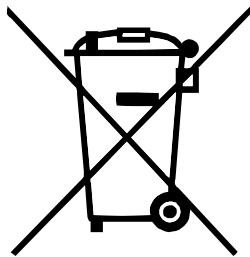

Equipment containing electrical components may not be disposed of together with domestic waste.
It must be collected separately as electrical and electronic waste according to local and currently valid legislation.

4. Installation



WARNING

Do not apply mains voltage to the starter until all wiring is complete.



WARNING

Always apply control voltage before (or with) mains voltage.

4.1 Command Source

The EMX4e can be started and stopped via the digital inputs, remote keypad, communication network or smart card. The command source can be set via the Setup Tools, or using parameter 1A *Command Source*.

4.2 Setup Procedure Overview

1. Mount the soft starter (refer to *Physical Installation* on page 12 for details).
2. Connect control wiring (refer to *Input Terminals* on page 23 for details).
3. Apply control voltage to the starter.
4. Configure your application:
 1. Press ► to open the Menu.
 2. Press ► to open the Quick Setup menu.
 3. Scroll through the list to find your application, then press ► to begin the configuration process (refer to *Quick Setup* on page 31 for details).
5. If your application is not listed in Quick Setup:
 1. Press ◀ to return to the Menu.
 2. Use ▼ to scroll to Main Menu and press ►.
 3. Scroll to Motor Details and press ►, then press ► again to edit parameter 1B *Motor Full Load Current*.
 4. Set parameter 1B to match the motor's full load current (FLC).
 5. Press ► to save the setting.
6. Close the Menu by pressing ◀ repeatedly.
7. (Optional) Use the built-in simulation tools to check that the control wiring is connected correctly (refer to *Run simulation* on page 32).
8. Power off the soft starter.
9. Connect the motor cables to starter output terminals 2/T1, 4/T2, 6/T3.
10. Connect mains supply cables to starter input terminals 1/L1, 3/L2, 5/L3 (refer to *Power Terminations* on page 27).

The soft starter is now ready to control the motor.

4.3 Inputs



CAUTION


The control inputs are powered by the soft starter. Do not apply external voltage to the control input terminals.




NOTE

Cables to the control inputs must be segregated from mains voltage and motor cabling.

Input terminals

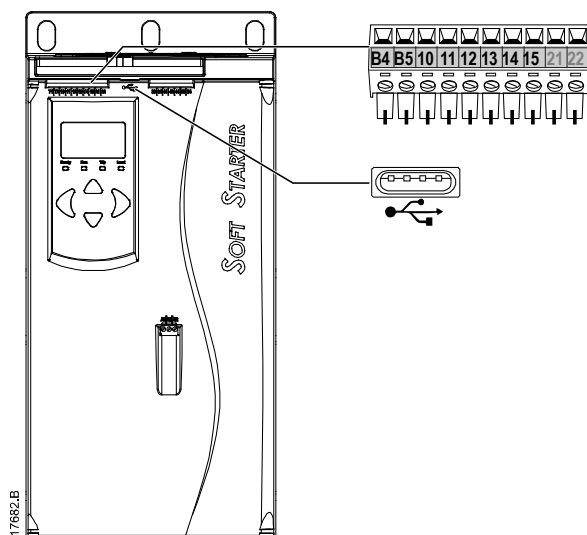

B4, B5	Motor thermistor input
10, 11	Reset input
11, 12	Start/stop input
13, 14	Programmable input A (default = Input Trip (N/O))
13, 15	Programmable input B (default = Input Trip (N/O))
	USB port

Motor thermistor

Motor thermistors can be connected directly to the EMX4e. The soft starter will trip when the resistance of the thermistor circuit exceeds approximately 3.6 kΩ or falls below 20 Ω.

The thermistors must be wired in series. The thermistor circuit should be run in screened cable and must be electrically isolated from earth and all other power and control circuits.



NOTE

The thermistor input is disabled by default, but activates automatically when a thermistor is detected. If thermistors have previously been connected to the EMX4e but are no longer required, use the Thermistor Reset function to disable the thermistor. Thermistor Reset is accessed via the Setup Tools.

Reset/starter disable

The reset input (10, 11) is normally closed by default. The EMX4e will not perform a start if the reset input is open. The display will show "Not Ready". If the reset input opens while the EMX4e is running, the starter will remove power and allow the motor to coast to stop.




NOTE

The reset input can be configured for normally open or normally closed operation. Use parameter 7I *Reset/Enable Logic*.

Start/Stop

The EMX4e requires two-wire control.

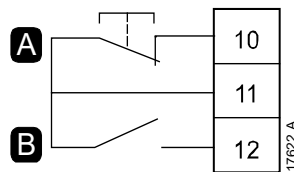

A	Reset
B	Start/Stop



WARNING

If the start input is closed when control voltage is applied, the starter will attempt to start.

Check that the start/stop input is open before applying control voltage.



NOTE

The EMX4e will only accept commands from the control inputs if parameter 1A *Command Source* is set to Digital Input.

Programmable Inputs

The programmable inputs (13, 14 and 13, 15) allow external equipment to control the starter.


The operation of the programmable inputs is controlled by parameters 7A~7H.

USB Port

The USB port can be used to upload a configuration file, or download parameter settings and event log information from the starter. Refer to *USB Save & Load* on page 34 for details.

4.4 Outputs

Output terminals

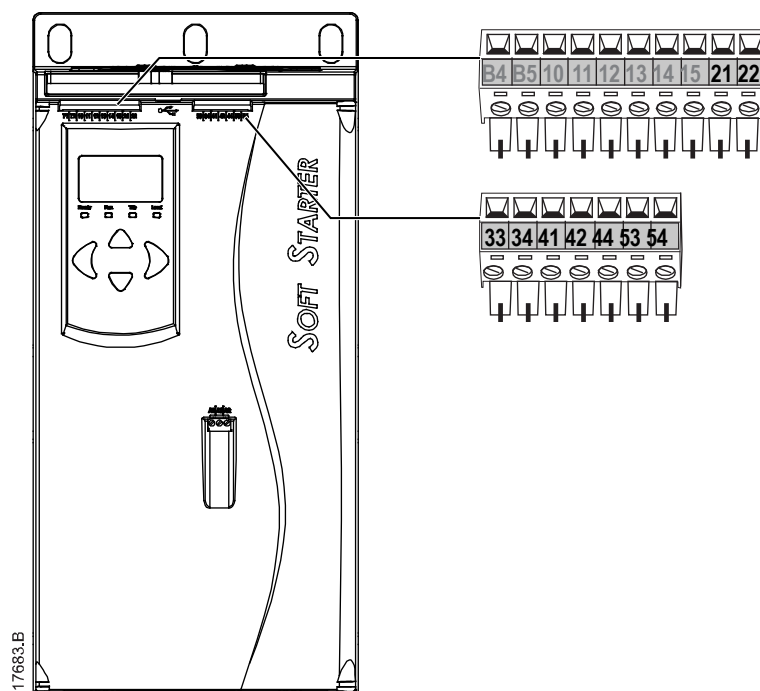

21, 22	Analog output
33, 34	Main contactor output
41, 42, 44	Relay output A (default = Run)
53, 54	Relay output B (default = Run)

Analog output

The EMX4e has an analog output, which can be connected to associated equipment to monitor motor performance.

The operation of the analog output is controlled by parameters 9A~9D.

Main contactor output

The main contactor output (33, 34) closes as soon as the soft starter receives a start command and remains closed while the soft starter is controlling the motor (until the motor starts a coast to stop, or until the end of a soft stop). The main contactor output will also open if the soft starter trips.

The main contactor output can also be used to control a shunt trip circuit breaker.




NOTE

Use parameter 20G *Shunt Trip Mode* to configure the soft starter for use with a main contactor or circuit breaker.


- For use with a main contactor, use the default setting of "Disable"
- For use with a circuit breaker, set 20G to "Enable"

Soft starter installed with main contactor

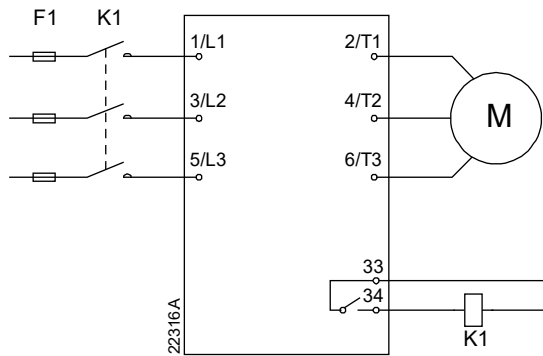

F1	Fuses
K1	Main contactor

Soft starter installed with a shunt relay and circuit breaker

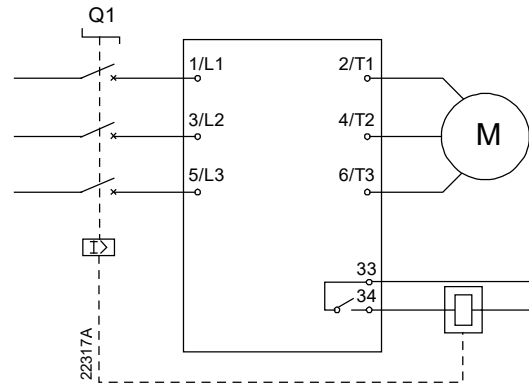

Q1	Circuit breaker
-----------	-----------------



CAUTION

Some electronic contactor coils are not suitable for direct switching with PCB mount relays. Consult the contactor manufacturer/supplier to confirm suitability.


Programmable outputs

The programmable outputs (41, 42, 44 and 53, 54) can report the status of the starter, or can be used to control associated equipment.

The operation of the programmable outputs is controlled by parameters 8A~8F.

4.5 Control voltage

Control voltage terminals

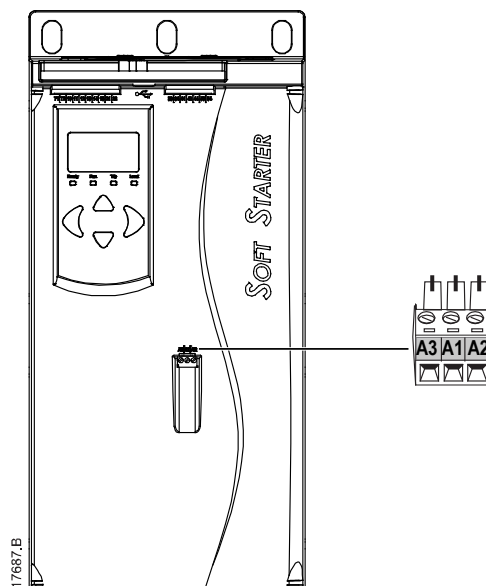

Connect the control supply according to the supply voltage being used.





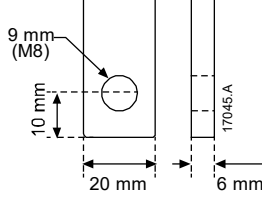
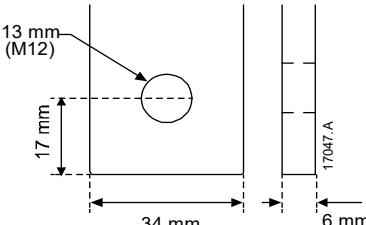
- EMX4e-xxxxB-xx-**C1** (110~120 VAC): A1, A2
- EMX4e-xxxxB-xx-**C1** (220~240 VAC): A2, A3
- EMX4e-xxxxB-xx-**C2** (24 VAC/VDC): A1, A2

Install supplementary or branch overcurrent protection on the control circuit supply (A1, A2, A3), in accordance with the electrical code applicable at the installation location.

4.6 Power terminations

The power input and output terminals for EMX4e are at the bottom of the unit.

- Models EMX4e-0024B~EMX4e-0135B use cage clamps. Use only copper stranded or solid conductors, rated for 75 °C or higher.
- Models EMX4e-0184B~EMX4e-0580B use busbars. Use copper or aluminium conductors, stranded or solid, rated for 60 °C/75 °C.

EMX4e-0024B~EMX4e-0135B	
 <p>Cable size: 6-70 mm² (AWG 10-2/0) Torque: 4 Nm (2.9 ft-lb)</p>	 Torx T20 x 150  Flat 7 mm x 150
 <p>14 mm (0.55 inch)</p>	
EMX4e-0184B~EMX4e-0250B	EMX4e-0352B~EMX4e-0580B
19 Nm (14.0 ft-lb)	66 Nm (49.0 ft-lb)
	



NOTE

If the installation requires large diameter cables, it is possible to complete each termination with two smaller cables, one on each side of the busbar.



NOTE

Some units use aluminium busbars. When connecting power terminations, we recommend cleaning the surface contact area thoroughly (using an emery or stainless steel brush) and using an appropriate jointing compound to prevent corrosion.

Wiring connectors


Select a connector according to the wire size, material and your application requirements.

A compression connector is recommended for models EMX4e-0184B to EMX4e-0580B. The recommended crimping tool is TBM8-750.

Model	Example connector – aluminium cable	Example connector – copper cable
EMX4e-0184B	61162	60150
EMX4e-0200B	61165	60156
EMX4e-0229B	61171	60165
EMX4e-0250B		
EMX4e-0352B	61162	60150
EMX4e-0397B	61165	60156
EMX4e-0410B		60162
EMX4e-0550B	61178	60171
EMX4e-0580B		

Motor connection

The EMX4e must be connected to the motor in-line (also called three-wire connection).

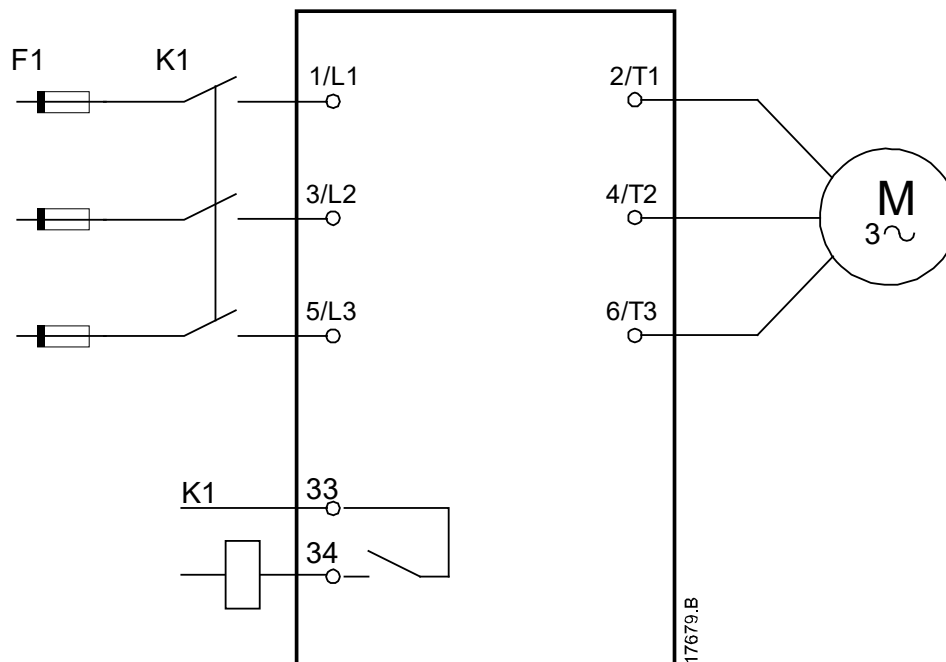


K1	Main contactor (strongly recommended)
F1	Fuses or circuit breaker (optional)
33, 34	Main contactor output

4.7 Typical installation

The EMX4e is installed with a main contactor (AC3 rated). Control voltage must be supplied from the input side of the contactor.

The main contactor is controlled by the main contactor output (33, 34).

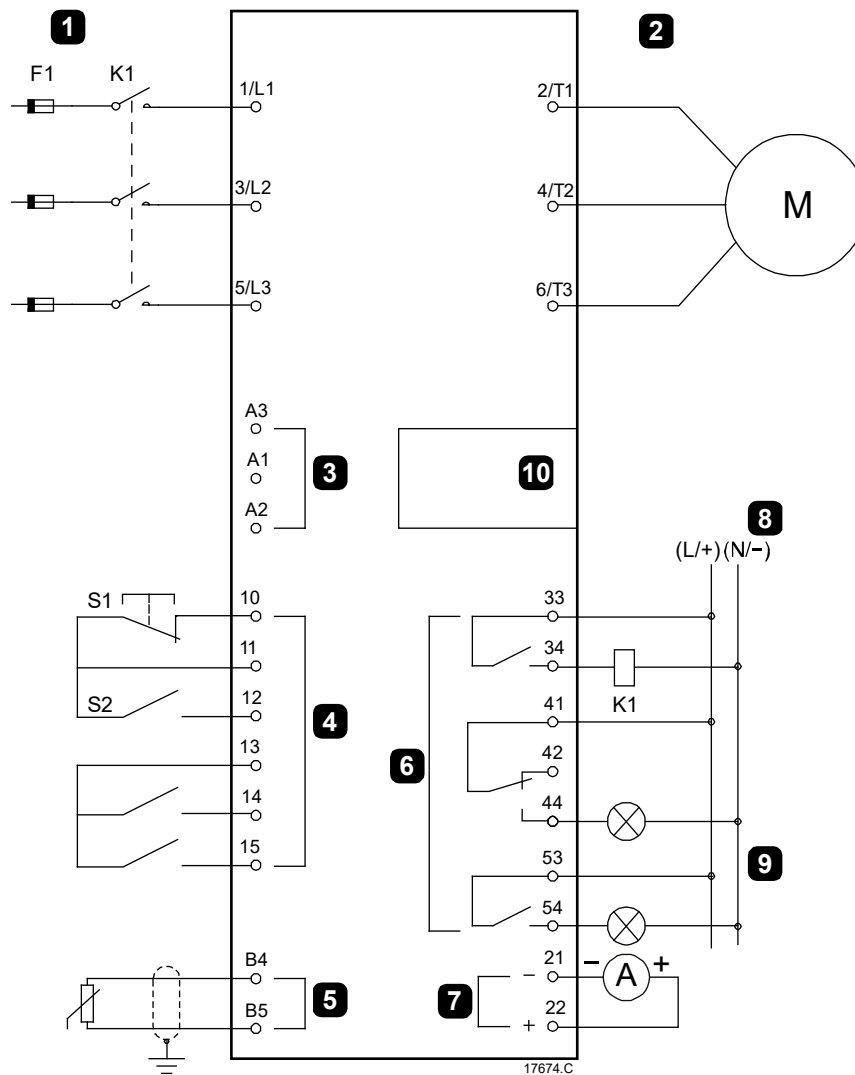

INSTALLATION

1	Three-phase supply	K1	Main contactor
2	Motor	F1	Semiconductor fuses (optional)
3	Control voltage (soft starter)	10, 11 (S1)	Reset
4	Digital inputs	11, 12 (S2)	Start/Stop
5	Motor thermistor input	13, 14	Programmable input A (default = Input Trip (N/O))
6	Relay outputs	13, 15	Programmable input B (default = Input Trip (N/O))
7	Analog output	B4, B5	Motor thermistor input
8	Control voltage (external equipment)	33, 34	Main contactor output
9	Pilot lamps	41, 42, 44	Relay output A (default = Run)
10	Communications / Smart card expansion port	53, 54	Relay output B (default = Run)
		21, 22	Analog output

4.8 Quick setup

The Quick Setup Menu makes it easy to configure the EMX4e for common applications. The EMX4e guides you through the most common installation parameters, and suggests a typical setting for the application. You can adjust each parameter to suit your exact requirements.

All other parameters remain at default values. To change other parameter values or review the default settings, use the menu (refer to *Parameter List* for details).

Always set parameter 1B *Motor Full Load Current* to match the motor's nameplate full load current.

Application	Start Mode	Start Ramp Time (seconds)	Initial Current (%)	Current Limit (%)	Adaptive Start Profile	Stop Mode	Stop Time (seconds)	Adaptive Stop Profile
Pump Centrifugal	Adaptive Control	10	200	500	Const. accel.	Adaptive Control	15	Const. decel.
Pump bore	Adaptive Control	3	200	500	Const. accel.	Adaptive Control	3	Const. decel.
Pump Hydraulic	Constant Current	2	200	350	n/a	Coast To Stop	n/a	n/a
Fan Damped	Constant Current	2	200	350	n/a	Coast To Stop	n/a	n/a
Fan Undamped	Constant Current	2	200	450	n/a	Coast To Stop	n/a	n/a
Compressor Screw	Constant Current	2	200	400	n/a	Coast To Stop	n/a	n/a
Compressor Recip	Constant Current	2	200	450	n/a	Coast To Stop	n/a	n/a
Conveyor	Constant Current	5	200	450	n/a	Coast To Stop	n/a	n/a
Bow Thruster	Constant Current	5	100	400	n/a	Coast To Stop	n/a	n/a
Bandsaw	Constant Current	2	200	450	n/a	Coast To Stop	n/a	n/a



NOTE

The Adaptive Start and Stop Profile settings only apply when using Adaptive Control. The settings are ignored for all other start and stop modes.

5. Setup tools

Setup Tools includes options to load or save parameters to a backup file, set the starter's network address, check the status of the inputs and outputs, reset the thermal models or test operation using the Run Simulation.

To access the Setup Tools, press **MENU** to open the Menu then select Setup Tools.

5.1 Command source

The EMX4e can be started and stopped via the digital inputs, remote keypad, communication network or smart card. The command source can be set via the Setup Tools, or using parameter 1A *Command Source*.

If the remote keypad is installed, the **LOCAL/REMOTE** button provides shortcut access to the Command Source function in Setup Tools.

5.2 Commissioning

Commissioning lets the starter be started and stopped via the local keypad. Use the ▲ and ▼ buttons to select a function, then press ► to send the selected command to the starter. The available functions are:

- Quick stop (coast to stop)/Reset
- Start
- Stop

5.3 Run simulation

The run simulation simulates a motor starting, running and stopping to confirm that the soft starter and associated equipment have been installed correctly.



NOTE

The soft starter must be disconnected from mains voltage.
The simulation is only available when the soft starter is in Ready state.

To use the run simulation:

1. Press **MENU** to open the menu then select Setup Tools.
2. Scroll to Run Simulation and press ►.
3. Apply a start command from the selected command source. The EMX4e simulates its pre-start checks and closes the main contactor relay. The Run LED flashes.

Run Simulation
Ready
Apply Start Signal

Run Simulation
Pre-Start Checks
MENU to Continue



NOTE

If mains voltage is connected, an error message is shown.

4. Press ►. The EMX4e simulates starting. The Run LED flashes.
5. Press ►. The EMX4e simulates running.
6. Apply a stop command from the selected command source. The EMX4e simulates stopping. The Run LED flashes.
7. Press ►. The Ready LED flashes and the main contactor relay opens.
8. Press ►. The EMX4e activates then deactivates each programmable output.
9. Press ► to return to the Setup Tools.

Run Simulation
ATTENTION!
Remove Mains Volts
MENU to Continue

Run Simulation
Starting X:XXs
MENU to Continue

Run Simulation
Running
Apply Stop Signal

Run Simulation
Stopping X:XXs
MENU to Continue

Run Simulation
Stopped
MENU to Continue

Run Simulation
Prog Relay A
On
MENU to Continue

5.4 Load/save settings

Load/Save Settings allows users to:

- Reset the EMX4e's parameters to default values
- Load parameter settings from an internal file
- Save the current parameter settings to an internal file

The internal file contains default values until a user file is saved.

To load or save parameter settings:

1. Press **MENU** to open the menu then select Setup Tools.
2. Scroll to Load/Save Settings and press the ► button.
3. Scroll to the required function and press the ► button.
4. At the confirmation prompt, select YES to confirm or NO to cancel, then press ► to proceed.

Load/Save Settings
Load Defaults
Load User Set
Save User Set

Load Defaults
No
Yes

When the action has been completed, the screen will briefly display a confirmation message, then return to the previous menu level.

5.5 USB save and load

The USB Save & Load menu lets you:

- Save parameter settings and all event log entries to an external file (CSV format)
- Save parameter settings to an external file (proprietary format)
- Load parameter settings from a previously saved external file
- Load custom messages to display on the keypad when a programmable input is active



NOTE

The EMX4e supports FAT32 file systems. The EMX4e's USB functions are not compatible with NTFS file systems.

Save & Load Procedure

1. Connect the external drive to the USB port.
2. Press **MENU** to open the menu then select Setup Tools.
3. Scroll to USB Save & Load and press the ► button.
4. Scroll to the required function and press the ► button.
5. At the confirmation prompt, select YES to confirm or NO to cancel, then press ► to proceed.


USB Save & Load Save Params and Logs Save Master Params Load Master Params

Save Params and Logs No Yes

When the action has been completed, the screen will briefly display a confirmation message, then return to the previous menu level.

File locations and formats

Function	File location
Save Parameters and Logs	The starter will create a directory at the top level of the USB drive, named with the soft starter's serial number. The event log and parameter settings are saved as individual CSV files, and the soft starter's software and system information are saved to a text file.
Save Master Parameters	The starter will create a file called Master_Parameters.par, in the top level of the USB drive.
Load Master Parameters	The starter will load the file Master_Parameters.par from the top level of the USB drive. This file can be created or edited using the soft starter management software.
Load Custom Message	The starter will load the files Custom_Message_A.txt and Custom_Message_B.txt from the top level of the USB drive.

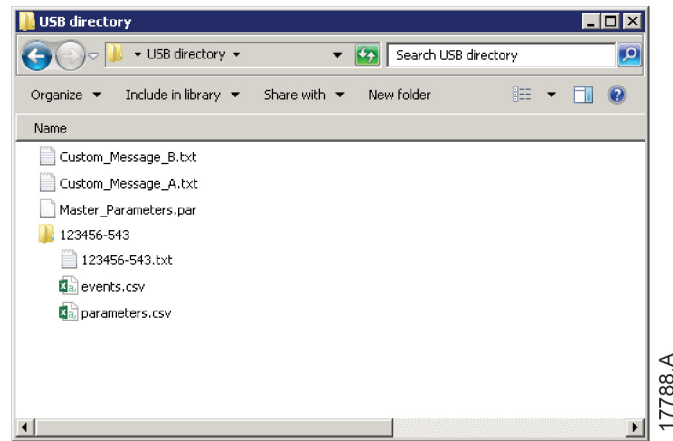

5.6 Network address

To use the EMX4e on an Ethernet network, separate addresses must be configured for:

- IP Address
- Gateway Address
- Subnet Mask

To set the network addresses:

1. Press **MENU** to open the menu then select Setup Tools.
2. Scroll to Network Address and press the ► button.
3. Scroll to the required function and press the ► button.
4. The first digit of the address will be highlighted.
5. Use ◀ and ▶ to select which digit to alter. Use the ▲ and ▼ buttons to change the value.
6. Press ► after the last digit to save the setting.

Set IP Address
192.168.000.002

When the action has been completed, the screen will briefly display a confirmation message, then return to the previous menu level.



NOTE

The network address can also be set using parameters 12H~12S.



NOTE


To configure the EMX4e for use with other communication protocols, use parameters 12A~12G.

5.7 Digital I/O state

The top line of the screen shows the start/stop, reset and programmable inputs.

The bottom line of the screen shows the fixed Main Contactor output, then programmable outputs A and B.

Digital I/O State
Inputs: 00000000
Outputs: 00000000

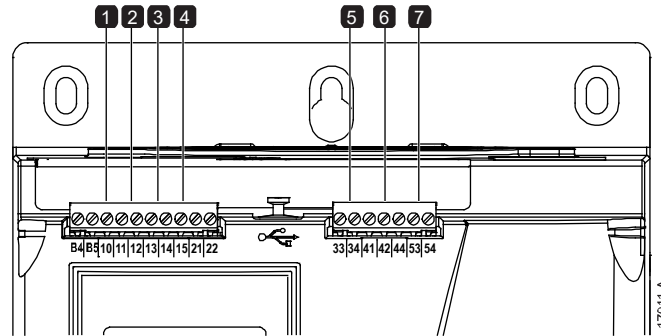

1	10, 11: Reset input
2	11, 12: Start/stop input
3	13, 14: Programmable input A
4	13, 15: Programmable input B

5	33, 34: Main contactor output
6	41, 42, 44: Relay output A
7	53, 54: Relay output B

5.8 Analog I/O state

The top line of the screen shows the state of the motor thermistor input.

The bottom line of the screen shows the value of the analog output.

Analog I/O State
Thermistor: 0
4-20mA Output: 04.0 mA

Thermistor input:

S = Short

H = Hot

C = Cold

O = Open

5.9 Serial number and rating

The top line of the screen shows the product name.

The middle line shows the unit's serial number.

The bottom line of the screen shows the model number.

Serial Number & Rating
EMX4e
123456-123
0410-V5-S1-C1

5.10 Software versions

The software versions screen reports the version of each software component in the starter:

- user interface
- motor control
- remote keypad (if connected)
- parameter list
- bootloader
- expansion card (if fitted)



NOTE

Updated software, including alternative languages, can be loaded into the starter via the USB port if required. Contact your local supplier for further information.

5.11 Thermistor reset

The thermistor input is disabled by default, but activates automatically when a thermistor is detected. If thermistors have previously been connected to the EMX4e but are no longer required, use the Thermistor Reset function to disable the thermistor.

5.12 Reset thermal model

The soft starter's thermal modelling software constantly monitors the motor's performance. This allows the starter to calculate the motor's temperature and ability to start successfully at any time.

The thermal model can be reset if required.



CAUTION

Resetting the motor thermal model will compromise thermal model protection and may compromise motor life. Only reset the thermal model in an emergency.

6. Logs

The Logs Menu provides information on events, trips and starter performance. To access the Logs Menu on the local keypad, press **MENU** to open the Menu then select Logs. On the remote keypad, press **LOGS**.

6.1 Event log

The Event Log stores details of the starter's most recent trips, warnings, and operations (including starts, stops and configuration changes).

Event 1 is the most recent and event 384 is the oldest stored event.



NOTE

Events in the event log are timestamped based on time elapsed since control power was last applied. The timestamp resets to zero when control power is cycled.



NOTE

The event log can be exported to an external file for analysis away from the starter. Refer to *USB Save & Load* on page 34 for details.

6.2 Counters

The counters store statistics on the starter's operation:

- Hours run (lifetime and since counter last reset)
- Number of starts (lifetime and since counter last reset)
- Number of times the thermal model has been reset

To view the counters:

1. Open the Logs.
2. Scroll to counters and press ►.
3. Use the ▲ and ▼ buttons to scroll through the counters. Press ► to view details.
4. To reset a counter, press ► then use the ▲ and ▼ buttons to select Reset/Do Not Reset. Press **STORE** to confirm the action.

To close the counter and return to the Logs, press ►.

6.3 QR Code

The EMX4e can generate a QR code which allows a smartphone to display key information about the starter, including serial number, firmware versions and installed options, plus details of the starter's three most recent trips. This information can be useful when requesting assistance from your local supplier.




NOTE

You must install the free Pocket Technician app in order to read the QR code.

7. Keypad and Feedback

7.1 The keypad

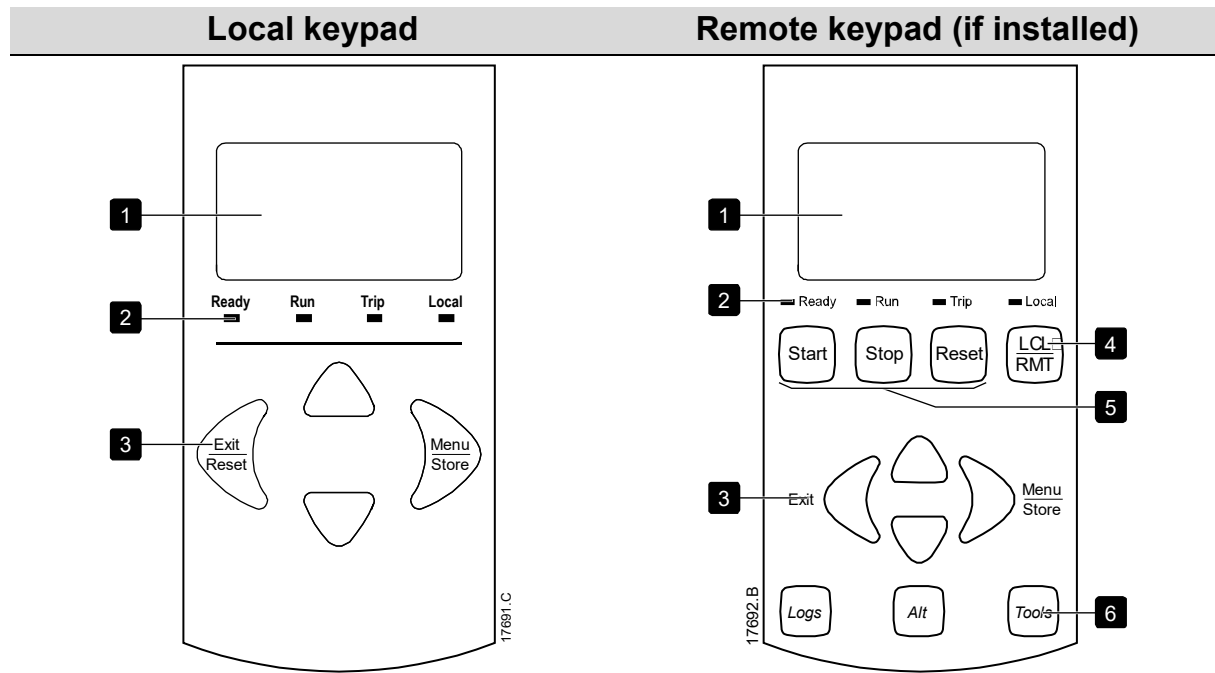

1	Four-line display for status and programming details.
2	Status LEDs
3	Menu navigation buttons: ◀: Exit the menu or parameter, or cancel a parameter change. On the local keypad, this button also resets a trip. ▶: Enter a menu or parameter, or save a parameter change. ▲ ▼: Scroll to the next or previous menu or parameter, change the setting of the current parameter or scroll through the status screens.
4	Shortcut to the command source menu in Setup Tools.
5	Soft starter local control buttons
6	Shortcut buttons for quick access to common tasks. LOGS: Open the Logs Menu. ALT: Select which graph to view, or pause/restart the graph (hold longer than 0.5 seconds) TOOLS: Open the Setup Tools.

7.2 Remote keypad

The remote keypad can be used to control the soft starter if parameter 1A *Command Source* is set to 'Remote Keypad'.

- If the remote keypad is not selected as the command source, the **START**, **STOP** and **RESET** buttons will have no effect.
- The menu navigation buttons and display on the remote keypad are always active.
- If a button is pressed on the starter's local keypad, the display on the remote keypad will update to match.



NOTE

The remote keypad can be safely connected or removed while the starter is running. It is not necessary to remove mains or control voltage.



NOTE

If parameter 1A *Command Source* is set to Remote Keypad, removing the remote keypad will cause a trip.

7.3 Lighten/darken the display

The backlight on the display can be adjusted:


- to lighten the display, hold down the ◀ button and press the ▲ key
- to darken the display, hold down the ◀ button and press the ▼ key



NOTE

The local and remote keypads can be adjusted independently.

7.4 Starter status LEDs

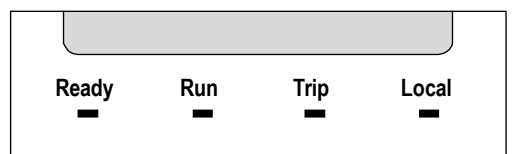

LED name	On	Flashing
Ready	The motor is stopped and the starter is ready to start.	The motor is stopped and the starter is not ready to start: <ul style="list-style-type: none"> • waiting for the <i>Restart Delay</i> (parameter 5H) • the thermal models indicate the starter and/or motor are too hot to start safely • the reset input (10, 11) is open
Run	The motor is in run state (receiving full voltage).	The motor is starting or stopping.
Trip	The starter has tripped.	The starter is in warning state.

LED name	On	Flashing
Local	The starter is being controlled via a remote keypad.	–

If all LEDs are off, the starter is not receiving control voltage.

7.5 Displays

The keypad displays a wide range of performance information about the soft starter. To scroll through the feedback screens, press the ▲ and ▼ buttons.

Starter information

At power-up, the starter information screen shows details of the starter's rating, software versions and serial number.

<div> Welcome 01.01/01.00/01.00 EMX4e-0069B-V5-S1-C1 </div>	Software versions: user interface, motor control, remote keypad Model code: current rating, mains voltage, frame size, control voltage (remote keypad software version is only displayed when a remote keypad is connected)
---	---

Starter status screen

<div> 69.0 A Running 69.0 A 415 V </div>	motor running current Starter status Parameter 10H <i>User Parameter 1</i> and parameter 10I <i>User Parameter 2</i>
---	--

Current

The current screen shows real-time line current on each phase.

Phase Currents
000.0A 000.0A 000.0A

Last Start Information

The last start information screen shows details of the most recent successful start:

- start duration (seconds)
- maximum start current drawn (as a percentage of motor full load current)
- calculated rise in motor temperature

Last start	010 s
350 % FLC	Δ Temp 5%

User configurable screen


The programmable screen can be configured to show the most important information for the particular application. Use parameters 10J ~ 10M to select which information to display.

Mains Frequency	59.7 Hz
Motor pf	0.95
Motor Power	37.0 kW
Motor Temp	85%

Performance graph

The performance graph provides a real-time display of operating performance. Use parameters 10B~10E to format the graph.

The display on the main keypad shows information for motor current.

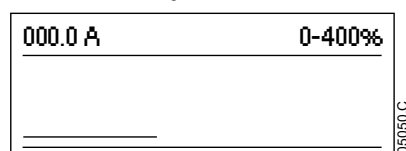

If a remote keypad is connected, press **ALT** to change the graph data. The graph can show:

- motor current
- motor temperature
- motor pf
- analog input data from the smart card (if installed)

8. Operation

8.1 Start, stop and reset commands

The EMX4e can be started and stopped via the digital inputs, remote keypad, communication network or smart card. The command source can be set via the Setup Tools, or using parameter 1A *Command Source*.

- The EMX4e will only accept Start and Reset commands from the designated command source.
- The EMX4e will accept Stop commands from the designated command source, but can be forced to stop by opening the reset input.
- The programmable input can be used to override the selected command source (refer to parameter 7A *Input A Function*).

8.2 Command override

The programmable input (13, 14) can be used to override the command source, for situations where the normal control mechanism has been lost. Set parameter 7A *Input A Function* to the alternative command source (eg 'Command Override: Keypad').

While the input is active, the starter will only accept commands from the selected override source. To restore control to the command source selected in parameter 1A *Command Source*, reopen the input.

8.3 Emergency mode

Emergency mode allows the EMX4e to run the motor and ignore trip conditions.

Emergency mode is controlled via a programmable input (input A 13, 14 or input B 13, 15) and parameter 7A *Input A Function*/7E *Input B Function* must be set to 'Emergency Mode'. A closed circuit across 13, 14 activates emergency mode. When the EMX4e receives a start command, it will continue to run until a stop command is received, ignoring all trips and warnings.

Emergency mode can be used in conjunction with any command source.



NOTE

Although emergency mode operation satisfies the functionality requirements of Fire Mode, we do not recommend its use in situations that require testing and/or compliance with specific standards as it is not certified.



CAUTION

Continued use of emergency mode is not recommended. Emergency mode may compromise the starter and/or motor life as all protections and trips are disabled.

Using the starter in emergency mode will void the product warranty.

8.4 Auxiliary trip

An external trip circuit (such as a low pressure alarm switch for a pumping system) can be used to trip the soft starter and stop the motor. The external circuit is connected to a programmable input (input A 13, 14 or input B 13, 15). To control the behaviour of the trip, set the following parameters:

- Parameter *7A Input A Function*: select 'Input Trip (N/O)'.
- Parameter *7B Input A Trip*: set as required. For example, 'Run Only' limits the input trip to when the soft starter is running only.
- Parameter *7C Input A Trip Delay*: sets a delay between the input activating and the soft starter tripping.
- Parameter *7D Input A Initial Delay*: sets a delay before the soft starter monitors the state of the input, after the start signal. For example, a delay may be required to allow time for pipeline pressure to build up.
- Parameter *7J Input A Name*: select a name, eg 'Input A Trip' (optional).

8.5 Typical control methods

The requirements of an application differ between each installation, but the methods listed below are often a good starting point for common applications.

Application	Start Mode	Start Ramp Time (seconds)	Initial Current (%FLC)	Current Limit (%FLC)	Stop Mode	Stop Time (seconds)
Bow thruster	Constant Current	5	100	400	Coast To Stop	n/a
Centrifuge (Separator)	Constant Current	1	200	450	Coast To Stop	n/a
Chipper	Constant Current	1	200	450	Coast To Stop	n/a
Compressor - reciprocating - loaded	Constant Current	1	200	450	Coast To Stop	n/a

Application	Start Mode	Start Ramp Time (seconds)	Initial Current (%FLC)	Current Limit (%FLC)	Stop Mode	Stop Time (seconds)
Compressor - reciprocating - unloaded	Constant Current	1	200	400	Coast To Stop	n/a
Compressor - screw - loaded	Constant Current	1	200	400	Coast To Stop	n/a
Compressor - screw - unloaded	Constant Current	1	200	350	Coast To Stop	n/a
Conveyor - horizontal	Constant Current	5	200	400	TVR Soft Stop	10
Conveyor - inclined	Constant Current	2	200	450	Coast To Stop	n/a
Conveyor - vertical (bucket)	Constant Current	2	200	450	Coast To Stop	n/a
Crusher - cone	Constant Current	1	200	350	Coast To Stop	n/a
Crusher - jaw	Constant Current	1	200	450	Coast To Stop	n/a
Crusher - rotary	Constant Current	1	200	400	Coast To Stop	n/a
Debarker	Constant Current	1	200	350	Coast To Stop	n/a
Fan - axial (damped)	Constant Current	1	200	350	Coast To Stop	n/a
Fan - axial (undamped)	Constant Current	1	200	450	Coast To Stop	n/a
Fan - centrifugal (damped)	Constant Current	1	200	350	Coast To Stop	n/a
Fan - centrifugal (undamped)	Constant Current	1	200	450	Coast To Stop	n/a
Fan - high pressure	Constant Current	1	200	450	Coast To Stop	n/a
Mill - ball	Constant Current	1	200	450	Coast To Stop	n/a
Mill - hammer	Constant Current	1	200	450	Coast To Stop	n/a
Pump - bore	Adaptive Control (Const. accel.)	3	n/a	500	Adaptive Control (Const. decel.)	3


Application	Start Mode	Start Ramp Time (seconds)	Initial Current (%FLC)	Current Limit (%FLC)	Stop Mode	Stop Time (seconds)
Pump - centrifugal	Adaptive Control (Const. accel.)	10	n/a	500	Adaptive Control (Const. decel.)	15
Pump - hydraulic	Constant Current	2	200	350	Coast To Stop	n/a
Pump - positive displacement	Adaptive Control (Const. accel.)	10	n/a	400	Adaptive Control (Const. decel.)	10
Pump - submersible	Adaptive Control (Const. accel.)	5	n/a	500	Adaptive Control (Const. decel.)	5
Saw - bandsaw	Constant Current	1	200	450	Coast To Stop	n/a
Saw - circular	Constant Current	1	200	350	Coast To Stop	n/a
Shredder	Constant Current	1	200	450	Coast To Stop	n/a

8.6 Soft start methods

Constant current

Constant current is the traditional form of soft starting, which raises the current from zero to a specified level and keeps the current stable at that level until the motor has accelerated.

Constant current starting is ideal for applications where the start current must be kept below a particular level.

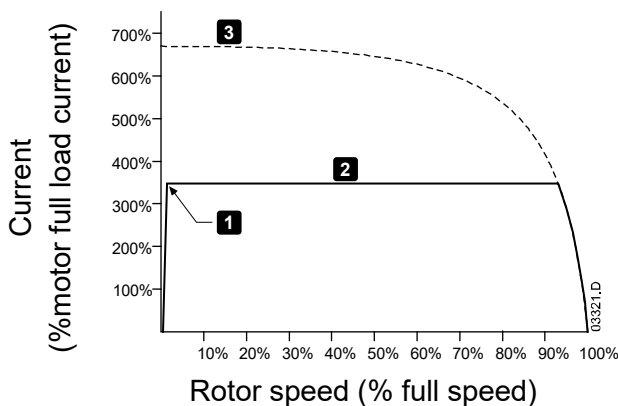


- 1: Initial Current (parameter 2C)
- 2: Current Limit (parameter 2D)
- 3: Full voltage current

Constant current with current ramp

Current ramp soft starting raises the current from a specified starting level (1) to a maximum limit (3), over an extended period of time (2).

Current ramp starting can be useful for applications where:

- the load can vary between starts (for example a conveyor which may start loaded or unloaded). Set the initial current (parameter 2C) to a level that will start the motor with a light load, and the current limit (parameter 2D) to a level that will start the motor with a heavy load.
- the load breaks away easily, but starting time needs to be extended (for example a centrifugal pump where pipeline pressure needs to build up slowly).
- the electricity supply is limited (for example a generator set), and a slower application of load will allow greater time for the supply to respond.

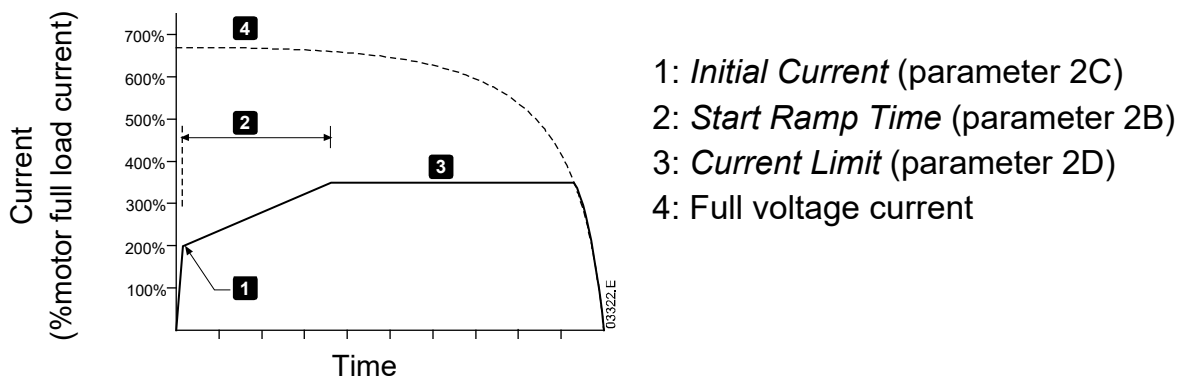

Timed voltage ramp

Timed voltage ramp (TVR) soft starting ramps the application of voltage to the motor over a defined time period. The voltage ramp reduces the initial starting torque and slows the motor's rate of acceleration.

TVR starting can be useful for applications where multiple motors of different sizes are connected in parallel, and/or the loads are not mechanically linked.



NOTE

For multiple motors of the same sizes, and/or mechanically coupled loads, use constant current starting.




NOTE

TVR soft starting is not suitable for high inertia loads (such as fans), which require a high level of voltage to accelerate the load.

For a timed voltage ramp start, the following are typical values and can be adjusted to suit your specific application:

- Add the FLC value of all the connected motors. Use this combined value to set parameter 1B *Motor Full Load Current*. (Note that the combined value must not exceed the starter rating.)
- Set parameter 2C *Initial Current* to 100%, parameter 2D *Current Limit* to 500% and set the ramp time as required (parameter 2B *Start Ramp Time*).

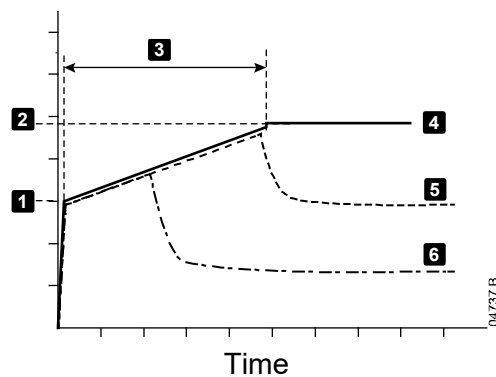

- 1: Initial Current (parameter 2C)
- 2: Current Limit (parameter 2D)
- 3: Start Ramp Time (parameter 2B)
- 4: Full voltage
- 5: Motor 1 current
- 6: Motor 2 current


Adaptive control for starting

In an adaptive control soft start, the EMX4e adjusts the current in order to start the motor within a specified time.



NOTE

The EMX4e will apply the current limit on all soft starts, including adaptive control. If the current limit is too low or the start ramp time (parameter 2B) is too short, the motor may not start successfully.

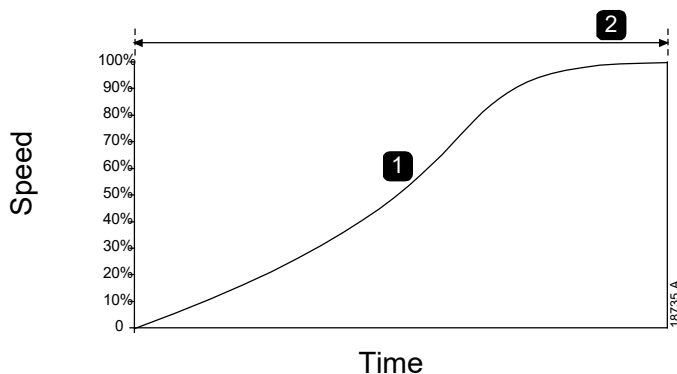

- 1. Constant Acceleration
- 2. Start Ramp Time (parameter 2B)

• Fine-tuning Adaptive Control

If the motor does not start or stop smoothly, adjust the adaptive control gain (parameter 2I). The gain setting determines how much the EMX4e will adjust future adaptive control starts and stops, based on information from the previous start. The gain setting affects both starting and stopping performance.

- If the motor accelerates or decelerates too quickly at the end of a start or stop, increase the gain setting by 5%~10%.
- If the motor speed fluctuates during starting or stopping, decrease the gain setting slightly.



NOTE

The EMX4e tunes Adaptive Control to match the motor. Changing the following parameters will reset Adaptive Control and the first start/stop cycle will use constant current start/timed voltage ramp stop: 1B Motor Full Load Current, 2D Current Limit, 2I Adaptive Control Gain.

8.7 Stop methods

Coast to stop

Coast to stop lets the motor slow at its natural rate, with no control from the soft starter. The time required to stop will depend on the type of load.


Timed voltage ramp soft stop

Timed voltage ramp stopping reduces the voltage to the motor gradually over a defined time. This can extend the stopping time of the motor and may avoid transients on generator set supplies.



NOTE

The load may continue to run after the stop ramp is complete.

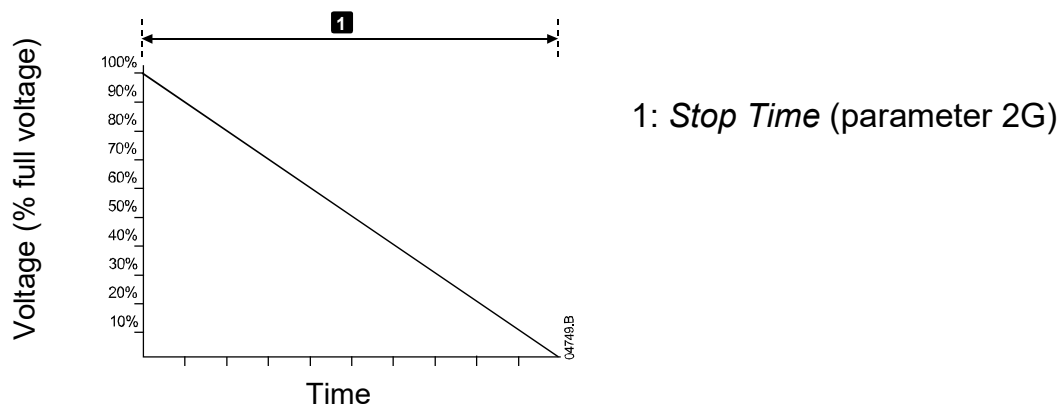

Adaptive control for stopping

In an adaptive control soft stop, the EMX4e controls the current in order to stop the motor within a specified time. Adaptive Control can be useful in extending the stopping time of low inertia loads.


If adaptive control is selected, the first soft stop will use timed voltage ramp. This allows the EMX4e to learn the characteristics of the connected motor. This motor data is used by the EMX4e during subsequent adaptive control stops.



CAUTION

Adaptive Control controls the motor's speed profile, within the programmed time limit. This may result in a higher level of current than traditional control methods.

If replacing a motor connected to an EMX4e programmed for Adaptive Control starting or stopping, the starter will need to learn the characteristics of the new motor. Change the value of parameter 1B *Motor Full Load Current* or parameter 2I *Adaptive Control Gain* to initiate the re-learning process. The next start will use constant current and the next stop will use timed voltage ramp.

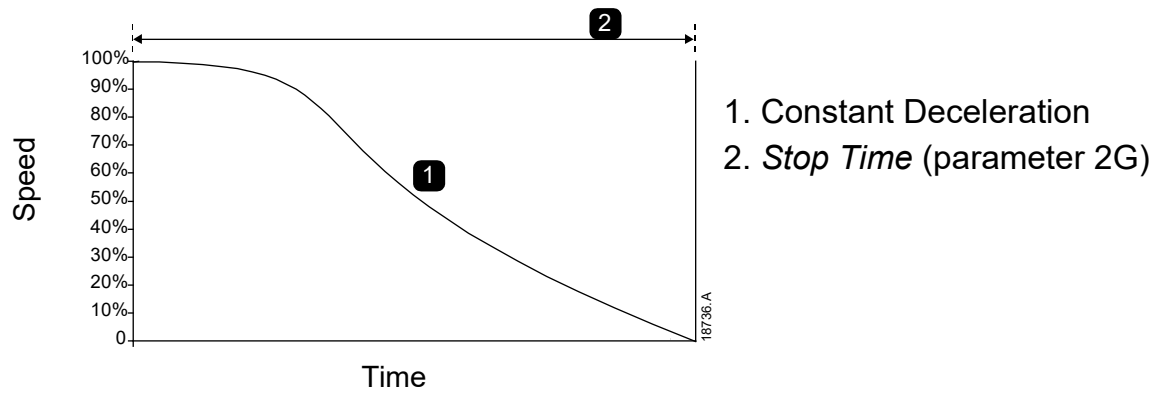

Adaptive Control is ideal for pumping applications, where it can minimise the damaging effects of fluid hammer.

9. Programmable parameters

9.1 Main menu

The main menu lets you view and change programmable parameters that control how the EMX4e operates.

To open the main menu, press the **MENU** button then scroll to Main Menu and press **MENU** again.



NOTE

Parameters for smart card functions are only visible in the parameter list if the smart card is installed.

9.2 Altering parameter values

To change a parameter value:

- scroll to the appropriate parameter in the main menu and press ► to enter edit mode.
- to alter the parameter setting, use the ▲ and ▼ buttons. Pressing ▲ or ▼ once will increase or decrease the value by one unit. If the button is held for longer than five seconds, the value will increase or decrease at a faster rate.
- to save changes, press **STORE**. The setting shown on the display will be saved and the keypad will return to the parameter list.
- to cancel changes, press **EXIT**. The keypad will ask for confirmation, then return to the parameter list without saving changes.

9.3 Adjustment lock

You can prevent users from altering parameter settings by turning on the adjustment lock (parameter 10G *Adjustment Lock*).

If a user attempts to change a parameter value when the adjustment lock is active, an error message is displayed:

Access Denied Adj Lock is On

9.4 Parameter list

		Parameter Group	Default Setting
1	Motor Details		
	1A	<i>Command Source</i>	Digital Input
	1B	<i>Motor Full Load Current</i>	Model dependent
	1C	<i>Locked Rotor Time</i>	00:10 (mm:ss)
	1D	<i>Locked Rotor Current</i>	600%
	1E	<i>Motor Service Factor</i>	105%
	1F	<i>Reserved</i>	
2	Motor Start/Stop		
	2A	<i>Start Mode</i>	Constant Current
	2B	<i>Start Ramp Time</i>	00:10 (mm:ss)
	2C	<i>Initial Current</i>	200%
	2D	<i>Current Limit</i>	350%
	2E	<i>Adaptive Start Profile</i>	Constant Acceleration
	2F	<i>Stop Mode</i>	TVR Soft Stop
	2G	<i>Stop Time</i>	00:00 (mm:ss)
	2H	<i>Adaptive Stop Profile</i>	Constant Deceleration
	2I	<i>Adaptive Control Gain</i>	75%
	2J	<i>Multi Pump</i>	Single Pump
	2K	<i>Start Delay</i>	00:00 (mm:ss)
5	Protection Levels		
	5A	<i>Current Imbalance</i>	30%
	5B	<i>Current Imbalance Delay</i>	00:03 (mm:ss)
	5C	<i>Undercurrent</i>	20%
	5D	<i>Undercurrent Delay</i>	00:05 (mm:ss)
	5E	<i>Overcurrent</i>	400%
	5F	<i>Overcurrent Delay</i>	00:00 (mm:ss)
	5G	<i>Excess Start Time</i>	00:20 (mm:ss)
	5H	<i>Restart Delay</i>	00:10 (mm:ss)
	5I	<i>Starts per Hour</i>	0
	5J	<i>Phase Sequence</i>	Any Sequence
6	Protection Actions		
	6A	<i>Auto-Reset Count</i>	0
	6B	<i>Auto-Reset Delay</i>	00:05 (mm:ss)
	6C	<i>Current Imbalance</i>	Soft Trip and Log
	6D	<i>Undercurrent</i>	Soft Trip and Log
	6E	<i>Overcurrent</i>	Soft Trip and Log
	6F	<i>Excess Start Time</i>	Soft Trip and Log
	6G	<i>Input A Trip</i>	Soft Trip and Log

		Parameter Group	Default Setting
	6H	<i>Input B Trip</i>	Soft Trip and Log
	6I	<i>Network Communications</i>	Soft Trip and Log
	6J	<i>Remote Keypad Fault</i>	Soft Trip and Log
	6K	<i>Frequency</i>	Soft Trip and Log
	6L	<i>Phase Sequence</i>	Soft Trip and Log
	6M	<i>Motor Overtemperature</i>	Soft Trip and Log
	6N	<i>Motor Thermistor Circuit</i>	Soft Trip and Log
7 Inputs			
	7A	<i>Input A Function</i>	Input Trip (N/O)
	7B	<i>Input A Trip</i>	Operating Only
	7C	<i>Input A Trip Delay</i>	00:00 (mm:ss)
	7D	<i>Input A Initial Delay</i>	00:00 (mm:ss)
	7E	<i>Input B Function</i>	Input Trip (N/O)
	7F	<i>Input B Trip</i>	Operating Only
	7G	<i>Input B Trip Delay</i>	00:00 (mm:ss)
	7H	<i>Input B Initial Delay</i>	00:00 (mm:ss)
	7I	<i>Reset/Enable Logic</i>	Normally Closed (N/C)
	7J	<i>Input A Name</i>	Input A Trip
	7K	<i>Input B Name</i>	Input B Trip
8 Relay Outputs			
	8A	<i>Relay A Function</i>	Run
	8B	<i>Relay A On Delay</i>	00:00 (mm:ss)
	8C	<i>Relay A Off Delay</i>	00:00 (mm:ss)
	8D	<i>Relay B Function</i>	Run
	8E	<i>Relay B On Delay</i>	00:00 (mm:ss)
	8F	<i>Relay B Off Delay</i>	00:00 (mm:ss)
	8G	<i>Low Current Flag</i>	50%
	8H	<i>High Current Flag</i>	100%
	8I	<i>Motor Temperature Flag</i>	80%
	8J	<i>Main Contactor Time</i>	400 ms
9 Analog Output			
	9A	<i>Analog Output A</i>	Current (% FLC)
	9B	<i>Analog A Scale</i>	4-20 mA
	9C	<i>Analog A Maximum Adjustment</i>	100%
	9D	<i>Analog A Minimum Adjustment</i>	000%
10 Display			
	10A	<i>Language</i>	English
	10B	<i>Temperature Scale</i>	Celsius
	10C	<i>Graph Timebase</i>	30 seconds

PROGRAMMABLE PARAMETERS

		Parameter Group	Default Setting
	10D	<i>Graph Maximum Adjustment</i>	400%
	10E	<i>Graph Minimum Adjustment</i>	0%
	10F	<i>Current Calibration</i>	100%
	10G	<i>Adjustment Lock</i>	Read & Write
	10H	<i>User Parameter 1</i>	Current
	10I	<i>User Parameter 2</i>	Mains Frequency
	10J	<i>User Parameter 3</i>	Motor pf
	10K	<i>User Parameter 4</i>	Motor Temperature (%)
	10L	<i>User Parameter 5</i>	Hours Run
	10M	<i>User Parameter 6</i>	Number of Starts
12 Communications Card			
	12A	<i>Modbus Address</i>	1
	12B	<i>Modbus Baud Rate</i>	9600
	12C	<i>Modbus Parity</i>	None
	12D	<i>Modbus Timeout</i>	Off
	12E	<i>Devicenet Address</i>	0
	12F	<i>Devicenet Baud Rate</i>	125kB
	12G	<i>Profibus Address</i>	1
	12H	<i>Gateway Address</i>	192
	12I	<i>Gateway Address 2</i>	168
	12J	<i>Gateway Address 3</i>	0
	12K	<i>Gateway Address 4</i>	100
	12L	<i>IP Address</i>	192
	12M	<i>IP Address 2</i>	168
	12N	<i>IP Address 3</i>	0
	12O	<i>IP Address 4</i>	2
	12P	<i>Subnet Mask</i>	255
	12Q	<i>Subnet Mask 2</i>	255
	12R	<i>Subnet Mask 3</i>	255
	12S	<i>Subnet Mask 4</i>	0
	12T	<i>DHCP</i>	Disable
	12U	<i>Location ID</i>	0
20 Advanced			
	20A	<i>Tracking Gain</i>	50%
	20B	<i>Pedestal Detect</i>	80%
	20C	<i>Bypass Contactor Delay</i>	100 ms
	20D	<i>Model Rating</i>	Model dependent
	20E	<i>Screen Timeout</i>	1 minute
	20F	<i>Motor Connection</i>	Auto-detect

		Parameter Group	Default Setting
	20G	<i>Shunt Trip Mode</i>	Disable
30	Pump Input Configuration		
	30A	<i>Pressure Sensor Type</i>	None
	30B	<i>Pressure Units</i>	kPa
	30C	<i>Pressure at 4 mA</i>	0
	30D	<i>Pressure at 20 mA</i>	0
	30E	<i>Flow Sensor Type</i>	None
	30F	<i>Flow Units</i>	litres/second
	30G	<i>Flow at 4 mA</i>	0
	30H	<i>Flow at 20 mA</i>	0
	30I	<i>Units per Minute at Max Flow</i>	0
	30J	<i>Pulses per Minute at Max Flow</i>	0
	30K	<i>Units per Pulse</i>	0
	30L	<i>Depth Sensor Type</i>	None
	30M	<i>Depth Units</i>	metres
	30N	<i>Depth at 4 mA</i>	0
	30O	<i>Depth at 20 mA</i>	0
31	Flow Protection		
	31A	<i>High Flow Trip Level</i>	10
	31B	<i>Low Flow Trip Level</i>	5
	31C	<i>Flow Start Delay</i>	00:00:500 (mm:ss:ms)
	31D	<i>Flow Response Delay</i>	00:00:500 (mm:ss:ms)
32	Pressure Protection		
	32A	<i>High Pressure Trip Level</i>	10
	32B	<i>High Pressure Start Delay</i>	00:00:500 (mm:ss:ms)
	32C	<i>High Pressure Response Delay</i>	00:00:500 (mm:ss:ms)
	32D	<i>Low Pressure Trip Level</i>	5
	32E	<i>Low Pressure Start Delay</i>	00:00:500 (mm:ss:ms)
	32F	<i>Low Pressure Response Delay</i>	00:00:500 (mm:ss:ms)
33	Pressure Control		
	33A	<i>Pressure Control Mode</i>	Off
	33B	<i>Start Pressure Level</i>	5
	33C	<i>Start Response Delay</i>	00:00:500 (mm:ss:ms)
	33D	<i>Stop Pressure Level</i>	10
	33E	<i>Stop Response Delay</i>	00:00:500 (mm:ss:ms)
34	Depth Protection		
	34A	<i>Depth Trip Level</i>	5
	34B	<i>Depth Reset Level</i>	10

PROGRAMMABLE PARAMETERS

		Parameter Group	Default Setting
	34C	<i>Depth Start Delay</i>	00:00:500 (mm:ss:ms)
	34D	<i>Depth Response Delay</i>	00:00:500 (mm:ss:ms)
35 Thermal Protection			
	35A	<i>Temperature Sensor Type</i>	None
	35B	<i>Temperature Trip Level</i>	40
36 Pump Trip Action			
	36A	<i>Pressure Sensor</i>	Soft Trip and Log
	36B	<i>Flow Sensor</i>	Soft Trip and Log
	36C	<i>Depth Sensor</i>	Soft Trip and Log
	36D	<i>High Pressure</i>	Soft Trip and Log
	36E	<i>Low Pressure</i>	Soft Trip and Log
	36F	<i>High Flow</i>	Soft Trip and Log
	36G	<i>Low Flow</i>	Soft Trip and Log
	36H	<i>Flow Switch</i>	Soft Trip and Log
	36I	<i>Well Depth</i>	Soft Trip and Log
	36J	<i>RTD/PT100 B</i>	Soft Trip and Log
40 Ground Fault			
	40A	<i>Ground Fault Level</i>	0 A
	40B	<i>Ground Fault Delay</i>	00:01 (mm:ss)
	40C	<i>Ground Fault Trip Active</i>	Operating Only
	40D	<i>Ground Fault Action</i>	Soft Trip and Log
	40E	<i>Ground Fault CT Ratio</i>	1000:1
41 Calibrate 4-20 mA			
	41A	<i>4 mA Calibration</i>	100%
	41B	<i>20 mA Calibration</i>	100%

9.5 1 Motor Details

1A – Command Source

Options:	Digital Input (default)	The EMX4e will accept start and stop commands from the digital inputs.
	Network	The EMX4e will accept start and stop commands from the communication expansion card.
	Remote Keypad	The EMX4e will accept start and stop commands from the Remote Keypad.
	Smart Card	The EMX4e will accept start and stop commands from the smart card.

Description: Selects the command source for controlling the soft starter.

1B – Motor Full Load Current

Range: Model dependent

Description: Matches the starter to the connected motor's full load current. Set to the full load current (FLC) rating shown on the motor nameplate.

1C – Locked Rotor Time

Range: 0:01 - 2:00 (minutes:seconds) **Default:** 10 seconds

Description: Sets the maximum length of time the motor can sustain locked rotor current from cold before reaching its maximum temperature. Set according to the motor datasheet.

1D – Locked Rotor Current

Range: 400% - 1200% FLC **Default:** 600%

Description: Sets the locked rotor current of the connected motor, as a percentage of full load current. Set according to the motor datasheet.

1E – Motor Service Factor

Range: 100% - 130% **Default:** 105%

Description: Sets the motor service factor used by the thermal model. If the motor runs at full load current, it will reach 100%. Set according to the motor datasheet.

**NOTE**

Parameters 1C, 1D and 1E determine the trip current for motor overload protection. The default settings of parameters 1C, 1D and 1E provide Motor Overload Protection: Class 10, Trip Current 105% of FLA (full load amperage) or equivalent.

1F – Reserved

Description: This parameter is reserved for future use.

9.6 2 Motor Start/Stop

2A – Start Mode

Options: Constant Current (default)
Adaptive Control

Description: Selects the soft start mode.

**NOTE**

The EMX4e will apply the current limit on all soft starts, including adaptive control. If the current limit is too low or the start ramp time (parameter 2B) is too short, the motor may not start successfully.

2B – Start Ramp Time

Range: 0:01 - 3:00 (minutes:seconds) **Default:** 10 seconds

Description: Sets the total start time for an Adaptive Control start or the ramp time for current ramp starting (from the initial current to the current limit).

2C – Initial Current

Range: 100% - 600% FLC **Default:** 200%

Description: Sets the initial start current level for current ramp starting, as a percentage of motor full load current. Set so that the motor begins to accelerate immediately after a start is initiated. If current ramp starting is not required, set the initial current equal to the current limit.

2D – Current Limit

Range: 100% - 600% FLC **Default:** 350%

Description: Sets the current limit for constant current and current ramp soft starting, as a percentage of motor full load current.

2E – Adaptive Start Profile

Options: Constant Acceleration (default)

Description: Selects which profile the EMX4e will use for an Adaptive Control soft start.



NOTE

The EMX4e will apply the current limit on all soft starts, including adaptive control. If the current limit is too low or the start ramp time (parameter 2B) is too short, the motor may not start successfully.

2F – Stop Mode

Options: Coast To Stop
TVR Soft Stop (default)
Adaptive Control

Description: Selects the stop mode.

2G – Stop Time

Range: 0:00 - 4:00 (minutes:seconds) **Default:** 0 second

Description: Sets the time for soft stopping the motor using timed voltage ramp or Adaptive Control. If a main contactor is installed, the contactor must remain closed until the end of the stop time. Use the main contactor output (33, 34) to control the main contactor.

2H – Adaptive Stop Profile

Options: Constant Deceleration (default)

Description: Selects which profile the EMX4e will use for an Adaptive Control soft stop.

2I – Adaptive Control Gain

Range: 1% - 200% **Default:** 75%

Description: Adjusts the performance of Adaptive Control. This setting affects both starting and stopping control.

2J – Multi Pump

Options: Single Pump (default)
Manifold Pump

Description: Adjusts the performance of adaptive control to suit installations with multiple pumps connected to a common outlet manifold.

2K – Start Delay

Range: 0:00 - 60:00 (minutes:seconds) **Default:** 0 second

Description: Sets a delay after the starter receives a start command, before it starts the motor.

9.7 5 Protection Levels**5A – Current Imbalance**

Range: 10% - 50% **Default:** 30%

Description: Sets the trip point for current imbalance protection.

5B – Current Imbalance Delay

Range: 0:00 - 4:00 (minutes:seconds) **Default:** 3 seconds

Description: Slows the EMX4e's response to current imbalance, avoiding trips due to momentary fluctuations.

5C – Undercurrent

Range: 0% - 100% **Default:** 20%

Description: Sets the trip point for undercurrent protection, as a percentage of motor full load current. Set to a level between the motor's normal working range and the motor's magnetising (no load) current (typically 25% to 35% of full load current). A setting of 0% disables undercurrent protection.

5D – Undercurrent Delay

Range: 0:00 - 4:00 (minutes:seconds) **Default:** 5 seconds

Description: Slows the EMX4e's response to undercurrent, avoiding trips due to momentary fluctuations.

5E – Overcurrent

Range: 80% - 600% **Default:** 400%

Description: Sets the trip point for overcurrent protection, as a percentage of motor full load current.

5F – Overcurrent Delay

Range: 0:00 - 1:00 (minutes:seconds) **Default:** 0 second

Description: Slows the EMX4e's response to overcurrent, avoiding trips due to momentary overcurrent events.

5G – Excess Start Time

Range: 0:00 - 4:00 (minutes:seconds) **Default:** 20 seconds

Description: Excess start time is the maximum time the EMX4e will attempt to start the motor. If the motor does not transition to Run mode within the programmed limit, the starter will trip. Set for a period slightly longer than required for a normal healthy start. A setting of 0 disables excess start time protection.

5H – Restart Delay

Range: 00:01 - 60:00 (minutes:seconds) **Default:** 10 seconds

Description: The EMX4e can be configured to force a delay between the end of a stop and the beginning of the next start. During the restart delay period, the display shows the time remaining before another start can be attempted.

5I – Starts per Hour

Range: 0 - 10 **Default:** 0

Description: Sets the maximum number of starts the EMX4e will attempt in a 60 minute period. A setting of 0 disables this protection.

5J – Phase Sequence

Options: Any Sequence (default)
Positive Only
Negative Only

Description: Selects which phase sequences the soft starter will allow at a start. During its pre-start checks, the starter examines the sequence of the phases at its input terminals and trips if the actual sequence does not match the selected option.

9.8 6 Protection Action

6A – Auto-Reset Count

Range: 0 – 5 **Default:** 0

Description: Sets how many times the soft starter will auto-reset, if it continues to trip.

The reset counter increases by one each time the soft starter auto-resets, and resets after a successful start.

Setting 6A to zero disables auto-reset.

6B – Auto-Reset Delay**Range:** 0:05 - 15:00 (minutes:seconds) **Default:** 5 seconds**Description:** Sets a delay before the soft starter will auto-reset a trip.**6C – Current Imbalance**

Options:	Soft Trip and Log (default)	The soft starter will stop the motor as selected in parameter 2F <i>Stop Mode</i> , then enter trip state. The trip must be reset before the EMX4e can restart.
	Soft Trip and Reset	The soft starter will stop the motor as selected in parameter 2F <i>Stop Mode</i> , then enter trip state. The trip will reset after the auto-reset delay.
	Trip Starter	The soft starter will remove power and the motor will coast to stop. The trip must be reset before the EMX4e can restart.
	Trip and Reset	The soft starter will remove power and the motor will coast to stop. The trip will reset after the auto-reset delay.
	Warn and Log	The protection will be written to the event log and the display will show a warning message, but the soft starter will continue to operate.
	Log Only	The protection will be written to the event log but the soft starter will continue to operate.
	Trip + Shunt Relay	The soft starter will remove power and the motor will coast to stop. The shunt trip relay (33, 34) will activate and the circuit breaker will disconnect mains voltage from the soft starter. The circuit breaker must be manually reset before operation can resume. This option is only effective if parameter 20G <i>Shunt Trip Mode</i> is set to 'Enable'.

Description: Selects the soft starter's response to each protection. All protection events are written to the event log.**6D – Undercurrent**

Options:	Soft Trip and Log (default)	Warn and Log
	Soft Trip and Reset	Log Only
	Trip Starter	Trip + Shunt Relay
	Trip and Reset	

Description: Selects the soft starter's response to the protection event.

6E – Overcurrent

Options:	Soft Trip and Log (default)	Warn and Log
	Soft Trip and Reset	Log Only
	Trip Starter	Trip + Shunt Relay
	Trip and Reset	

Description: Selects the soft starter's response to the protection event.

6F – Excess Start Time

Options:	Soft Trip and Log (default)	Warn and Log
	Soft Trip and Reset	Log Only
	Trip Starter	Trip + Shunt Relay
	Trip and Reset	

Description: Selects the soft starter's response to the protection event.

6G – Input A Trip

Options:	Soft Trip and Log (default)	Warn and Log
	Soft Trip and Reset	Log Only
	Trip Starter	Trip + Shunt Relay
	Trip and Reset	

Description: Selects the soft starter's response to the protection event.

6H – Input B Trip

Options:	Soft Trip and Log (default)	Warn and Log
	Soft Trip and Reset	Log Only
	Trip Starter	Trip + Shunt Relay
	Trip and Reset	

Description: Selects the soft starter's response to the protection event.

6I – Network Communications

Options:	Soft Trip and Log (default)	Warn and Log
	Soft Trip and Reset	Log Only
	Trip Starter	Stop
	Trip and Reset	Trip + Shunt Relay

Description: Selects the soft starter's response to the protection event. If set to Stop, the EMX4e will perform a soft stop, then can be restarted without a reset.

6J – Remote Keypad Fault

Options:	Soft Trip and Log (default)	Warn and Log
	Soft Trip and Reset	Log Only
	Trip Starter	Trip + Shunt Relay
	Trip and Reset	

Description: Selects the soft starter's response to the protection event.

6K – Frequency

Options:	Soft Trip and Log (default)	Warn and Log
	Soft Trip and Reset	Log Only
	Trip Starter	Trip + Shunt Relay
	Trip and Reset	

Description: Selects the soft starter's response to the protection event.

6L – Phase Sequence

Options:	Soft Trip and Log (default)	Warn and Log
	Soft Trip and Reset	Log Only
	Trip Starter	Trip + Shunt Relay
	Trip and Reset	

Description: Selects the soft starter's response to the protection event.

6M – Motor Overtemperature

Options:	Soft Trip and Log (default)	Warn and Log
	Soft Trip and Reset	Log Only
	Trip Starter	Trip + Shunt Relay
	Trip and Reset	

Description: Selects the soft starter's response to the protection event.

6N – Motor Thermistor Circuit

Options:	Soft Trip and Log (default)	Warn and Log
	Soft Trip and Reset	Log Only
	Trip Starter	Trip + Shunt Relay
	Trip and Reset	

Description: Selects the soft starter's response to the protection event.

9.9 7 Inputs**7A – Input A Function**

Options:	Command	Overrides the setting of 1A and sets the command source to the communications network.
	Override: Network	
	Command	Overrides the setting of 1A and sets the command source to the digital inputs.
	Override: Digital	
	Command	Overrides the setting of 1A and sets the command source to the remote keypad.
	Override: Keypad	
	Input Trip (N/O) (default)	A closed circuit across 13, 14 trips the soft starter.
	Input Trip (N/C)	An open circuit across 13, 14 trips the soft starter.

Emergency Mode	A closed circuit across 13, 14 activates emergency mode. When the EMX4e receives a start command, it will continue to run until a stop command is received, ignoring all trips and warnings.
----------------	--

Description: Selects the function of Input A.

7B – Input A Trip

Options:	Always Active	A trip can occur at any time when the soft starter is receiving power.
	Operating Only (default)	A trip can occur while the soft starter is running, stopping or starting.
	Run Only	A trip can only occur while the soft starter is running.

Description: Selects when an input trip can occur.

7C – Input A Trip Delay

Range: 0:00 - 4:00 (minutes:seconds) **Default:** 0 second

Description: Sets a delay between the input activating and the soft starter tripping.

7D – Input A Initial Delay

Range: 00:00 - 30:00 (minutes:seconds) **Default:** 0 second

Description: Sets a delay before an input trip can occur. The initial delay is counted from the time a start signal is received. The state of the input is ignored until the initial delay has elapsed.

7E – Input B Function

Options: Input Trip (N/O) (default)
Input Trip (N/C)
Emergency Mode

Description: Selects the function of Input B. Refer to parameter 7A *Input A Function* for details.

7F – Input B Trip

Options: Always Active
Operating Only (default)
Run Only

Description: Selects when an input trip can occur.

7G – Input B Trip Delay

Range: 0:00 - 4:00 (minutes:seconds) **Default:** 0 second

Description: Sets a delay between the input activating and the soft starter tripping.

7H – Input B Initial Delay

Range: 00:00 - 30:00 (minutes:seconds) **Default:** 0 second

Description: Sets a delay before an input trip can occur. The initial delay is counted from the time a start signal is received. The state of the input is ignored until the initial delay has elapsed.

7I – Reset/Enable Logic

Options: Normally Closed (default)
Normally Open

Description: Selects whether the reset input (10, 11) is normally open or normally closed.

**NOTE**

If the reset input is active, the starter will not operate.

7J – Input A Name

Options:	Input A Trip (default)	Controller
	Low Pressure	PLC
	High Pressure	Vibration Alarm
	Pump Fault	Field Trip
	Low Level	Interlock Trip
	High Level	Motor Temp
	No Flow	Motor Prot
	Starter Disable	Feeder Prot
		Custom Message

Description: Selects a message for the keypad to display when Input A is active.

The custom message can be loaded via the USB port. Refer to *USB Save & Load* on page 34 for details.

7K – Input B Name

Options:	Input B Trip (default)	Controller
	Low Pressure	PLC
	High Pressure	Vibration Alarm
	Pump Fault	Field Trip
	Low Level	Interlock Trip
	High Level	Motor Temp
	No Flow	Motor Prot
	Starter Disable	Feeder Prot
		Custom Message

Description: Selects a message for the keypad to display when Input B is active.

9.10 8 Relay Outputs

8A – Relay A Function

Options:	Off	Relay A is not used.
	Ready	The relay is closed when the starter is in Ready state.
	Run (default)	The Run output closes when the soft start is complete (when the starting current falls below 120% of the programmed motor full load current) and remains closed until the beginning of a stop (either soft stop or coast to stop).
	Warning	The relay closes when the starter issues a warning (refer to <i>6 Protection Action</i> on page 60).
	Trip	The relay closes when the starter trips (refer to <i>6 Protection Action</i> on page 60).
	Low Current Flag	The relay closes when the low current flag activates while the motor is running (refer to parameter 8G <i>Low Current Flag</i>).
	High Current Flag	The relay closes when the high current flag activates while the motor is running (refer to parameter 8H <i>High Current Flag</i>).
	Motor Temperature Flag	The relay closes when the motor temperature flag activates (refer to parameter 8I <i>Motor Temperature Flag</i>).
	Trip Failsafe	The relay closes when control power is applied. The relay opens if the soft starter trips or if control power is lost.

Description: Selects the function of Relay A. Relay A is a changeover relay.

8B – Relay A On Delay

Range: 0:00 - 5:00 (minutes:seconds) **Default:** 0 second

Description: Sets the delay for changing the state of Relay A.

8C – Relay A Off Delay

Range: 0:00 - 5:00 (minutes:seconds) **Default:** 0 second

Description: Sets the delay for changing the state of Relay A.

8D – Relay B Function

Options:	Off Trip	
	Ready	Low Current Flag
	Run (default)	High Current Flag
	Warning	Motor Temperature Flag

Description: Selects the function of Relay B (normally open). Refer to parameter 8A *Relay A Function* for details.

8E – Relay B On Delay

Range: 0:00 - 5:00 (minutes:seconds) **Default:** 0 second

Description: Sets the delay for closing Relay B.

8F – Relay B Off Delay

Range: 0:00 - 5:00 (minutes:seconds) **Default:** 0 second

Description: Sets the delay for re-opening Relay B.

8G – Low Current Flag

The EMX4e has low and high current flags to give early warning of abnormal operation. The current flags can be configured to indicate an abnormal current level during operation, between the normal operating level and the undercurrent or instantaneous overcurrent trip levels. The flags can signal the situation to external equipment via one of the programmable outputs.

The flags clear when the current returns within the normal operating range by 10% of the programmed flag value.

Range: 1% - 100% FLC **Default:** 50%

Description: Sets the level at which the low current flag operates, as a percentage of motor full load current.

8H – High Current Flag

Range: 50% - 600% FLC **Default:** 100%

Description: Sets the level at which the high current flag operates, as a percentage of motor full load current.

8I – Motor Temperature Flag

The EMX4e has a motor temperature flag to give early warning of abnormal operation. The flag can indicate that the motor is operating above its normal operating temperature but lower than the overload limit. The flag can signal the situation to external equipment via one of the programmable outputs.

Range: 0% - 160% **Default:** 80%

Description: Sets the level at which the motor temperature flag operates, as a percentage of the motor's thermal capacity.

8J – Main Contactor Time

Range: 100 – 2000 milliseconds **Default:** 400 milliseconds

Description: Sets the delay period between the starter switching the main contactor output (terminals 33, 34) and beginning the pre-start checks (before a start) or entering the not ready state (after a stop). Set according to the specifications of the main contactor used.

9.11 9 Analog Output**9A – Analog Output A**

Options:	Current (% FLC) (default)	Current as a percentage of motor full load current.
	Motor Temp (%)	The motor's temperature, calculated by the thermal model.
	Motor pf	Motor power factor, measured by the soft starter.
	Heatsink Temperature (%)	The soft starter's temperature, as a percentage of the heatsink's maximum allowed operating temperature.

Description: Selects which information will be reported via the analog output.

9B – Analog A Scale

Range: 0-20 mA
4-20 mA (default)

Description: Selects the range of the analog output.

9C – Analog A Maximum Adjustment

Range: 0% - 600% **Default:** 100%

Description: Sets the upper limit of the range that the analog output will represent. When the selected information is at or above the upper limit, the analog output will remain at its highest value.

9D – Analog A Minimum Adjustment

Range: 0% - 600% **Default:** 0%

Description: Sets the lower limit of the range that the analog output will represent. When the selected information is at or below the lower limit, the analog output will remain at its lowest value.

**NOTE**

If the values of parameters 9C and 9D are far apart, the analog output will represent a wide dynamic range. The resolution of the output will be coarse.

**NOTE**

If precise accuracy is important, use parameters *41A 4 mA Calibration* and *41B 20 mA Calibration* to calibrate the analog output.

9.12 10 Display

10A – *Language*

Options: English (default) Português
 Chinese Français
 Español Italiano
 Deutsch Russian

Description: Selects which language the keypad will use to display messages and feedback.

10B – *Temperature Scale*

Options: Celsius (default)
 Fahrenheit

Description: Selects whether the EMX4e will display temperatures in degrees Celsius or Fahrenheit.

10C – *Graph Timebase*

Options: 30 seconds (default)
 1 minute
 30 minutes
 1 hour

Description: Sets the graph time scale. The graph will progressively replace the old data with new data.

10D – *Graph Maximum Adjustment*

Range: 0% – 600% **Default:** 400%

Description: Adjusts the upper limit of the performance graph.

10E – *Graph Minimum Adjustment*

Range: 0% – 600% **Default:** 0%

Description: Adjusts the lower limit of the performance graph.

10F – *Current Calibration*

Range: 85% - 115% **Default:** 100%

Description: Calibrates the soft starter's current monitoring circuits to match an external current metering device.

Use the following formula to determine the necessary adjustment:

$$\text{Calibration (\%)} = \frac{\text{Current shown on EMX4e display}}{\text{Current measured by external device}}$$

10G – *Adjustment Lock*

Options:	Read & Write (default)	Allows users to alter parameter values in the main menu.
	Read Only	Prevents users altering parameter values in the main menu. Parameter values can still be viewed.

Description: Selects whether the keypad will allow parameters to be changed via the main menu.

10H – *User Parameter 1*

Options:	Blank	Displays no data in the selected area, allowing long messages to be shown without overlapping.
	Current (default)	Average rms current across all three phases
	Mains Frequency	The average frequency measured on three phases.
	Motor pf	The motor's power factor, measured by the soft starter.
	Motor Temp (%)	The motor's temperature, calculated by the thermal model.
	Hours Run	The number of hours the motor has run via the soft starter.
	Number of Starts	The number of starts the EMX4e has completed since the start counter was last reset.
	Pump Pressure	The pressure at the pump, as configured in parameters 30B~30D. This information is only available if the smart card is installed.
	Pump Flow	The flow at the pump, as configured in parameters 30F~30K. This information is only available if the smart card is installed.
	Well Depth	The depth of the well, as configured in parameters 30M~30O. This information is only available if the smart card is installed.
	Pump Temperature	The pump temperature, as measured by the PT100. This information is only available if the smart card is installed.
	Analog Output Value	The value of the analog output (refer to parameters 9A~9D).
	Heatsink Temperature	The soft starter's temperature, measured at the heatsink.
	Bypass Model (%)	The percentage of thermal capacity remaining in the bypass contactor.

SCR Temperature	The temperature of the SCRs, calculated by the thermal model.
Rating Capacity (%)	The thermal capacity available in the soft starter for its next start.

Description: Selects which information will be displayed on the main monitoring screen.

10I – User Parameter 2

Options: Refer to parameter 10H *User Parameter 1* for details.

Default: Mains Frequency

Description: Selects which information will be displayed on the main monitoring screen. Refer to parameter 10H *User Parameter 1* for details.

10J – User Parameter 3

Options: Refer to parameter 10H *User Parameter 1* for details.

Default: Motor pf

Description: Selects which information will be displayed on the programmable monitoring screen. Refer to parameter 10H *User Parameter 1* for details.

10K – User Parameter 4

Options: Refer to parameter 10H *User Parameter 1* for details.

Default: Motor Temp (%)

Description: Selects which information will be displayed on the programmable monitoring screen. Refer to parameter 10H *User Parameter 1* for details.

10L – User Parameter 5

Options: Refer to parameter 10H *User Parameter 1* for details.

Default: Hours Run

Description: Selects which information will be displayed on the programmable monitoring screen. Refer to parameter 10H *User Parameter 1* for details.

10M – User Parameter 6

Options: Refer to parameter 10H *User Parameter 1* for details.

Default: Number of Starts

Description: Selects which information will be displayed on the programmable monitoring screen. Refer to parameter 10H *User Parameter 1* for details.

9.13 12 Communications Card

12A – *Modbus Address*

Range: 1 - 254

Default: 1

Description: Sets the Modbus RTU network address for the soft starter.

12B – *Modbus Baud Rate*

Options: 4800
9600 (default)
19200
38400

Description: Selects the baud rate for Modbus RTU communications.

12C – *Modbus Parity*

Options: None (default)
Odd
Even
10-bit

Description: Selects the parity for Modbus RTU communications.

12D – *Modbus Timeout*

Options: Off (default)
10 seconds
60 seconds
100 seconds

Description: Selects the timeout for Modbus RTU communications.

12E – *Devicenet Address*

Range: 0 - 63

Default: 0

Description: Sets the DeviceNet network address for the soft starter.

12F – *Devicenet Baud Rate*

Options: 125 kB (default)
250 kB
500 kB

Description: Selects the baud rate for DeviceNet communications.

12G – *Profibus Address*

Range: 1 - 125

Default: 1

Description: Sets the Profibus network address for the soft starter.

12H – *Gateway Address*

Range: 0 - 255

Default: 192

Description: Sets the first component of the network gateway address. The gateway address is set using parameters 12H~12K and the default address is 192.168.0.100.

12I – Gateway Address 2**Range:** 0 - 255**Default:** 168**Description:** Sets the second component of the network gateway address.**12J – Gateway Address 3****Range:** 0 - 255**Default:** 0**Description:** Sets the third component of the network gateway address.**12K – Gateway Address 4****Range:** 0 - 255**Default:** 100**Description:** Sets the fourth component of the network gateway address.**NOTE**

The network address can also be set via the Network Address options in the Setup Tools. Refer to *Network Address* on page 34 for details.

12L – IP Address**Range:** 0 - 255**Default:** 192**Description:** Sets the first component of the soft starter's IP address, for Ethernet communications. The IP address is set using parameters 12L~12O and the default address is 192.168.0.2.**12M – IP Address 2****Range:** 0 - 255**Default:** 168**Description:** Sets the second component of the soft starter's IP address, for Ethernet communications.**12N – IP Address 3****Range:** 0 - 255**Default:** 0**Description:** Sets the third component of the soft starter's IP address, for Ethernet communications.**12O – IP Address 4****Range:** 0 - 255**Default:** 2**Description:** Sets the fourth component of the soft starter's IP address, for Ethernet communications.**NOTE**

The network address can also be set via the Network Address options in the Setup Tools. Refer to *Network Address* on page 34 for details.

12P – Subnet Mask**Range:** 0 - 255**Default:** 255**Description:** Sets the first component of the network subnet mask, for Ethernet communications. The subnet mask is set using parameters 12P~12S and the default mask is 255.255.255.0.


12Q – Subnet Mask 2**Range:** 0 - 255**Default:** 255**Description:** Sets the second component of the network subnet mask, for Ethernet communications.**12R – Subnet Mask 3****Range:** 0 - 255**Default:** 255**Description:** Sets the third component of the network subnet mask, for Ethernet communications.**12S – Subnet Mask 4****Range:** 0 - 255**Default:** 0**Description:** Sets the fourth component of the network subnet mask, for Ethernet communications.**NOTE**

The network address can also be set via the Network Address options in the Setup Tools. Refer to *Network Address* on page 34 for details.

12T – DHCP**Options:** Disable (default)
Enable**Description:** Selects whether the communications card will accept an IP address assigned by DHCP.**NOTE**

DHCP addressing is available with Modbus TCP and Ethernet/IP. DHCP addressing is not supported with Profinet.

12U – Location ID**Range:** 0 - 65535**Default:** 0**Description:** Sets the soft starter's unique location ID.**9.14 20 Advanced****20A – Tracking Gain****Range:** 1% - 200%**Default:** 50%**Description:** Fine-tunes the behaviour of the adaptive control algorithm.**20B – Pedestal Detect****Range:** 0% - 200%**Default:** 80%**Description:** Adjusts the behaviour of the adaptive control algorithm for soft stop.**20C – Bypass Contactor Delay****Range:** 100 – 2000 milliseconds**Default:** 100 milliseconds**Description:** Sets the starter to match the bypass contactor closing/opening time. Set according to the specifications of the bypass contactor used. If this time is too short, the starter will trip.

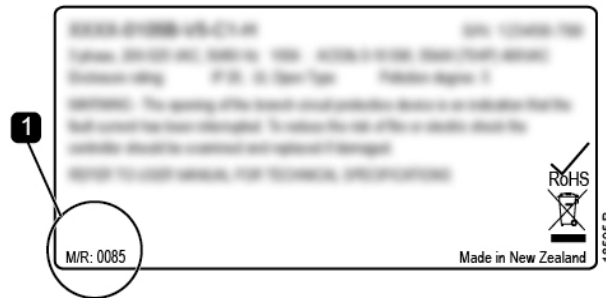20D – Model Rating**Range:** 0020~0580**Default:** Model dependent**Description:** The soft starter's internal model reference, as shown on the silver label on the side of the unit [1].**NOTE**

This parameter can only be adjusted by authorised servicing agents.

20E – Screen Timeout

Options: 1 minute (default) 4 minutes
 2 minutes 5 minutes
 3 minutes

Description: Sets the timeout for the menu to automatically close if no keypad activity is detected.**20F – Motor Connection**

Options: Auto-detect (default)
 In-line

Description: Override the soft starter's motor connection checks, where the connection is not correctly recognised on a grounded delta supply.**20G – Shunt Trip Mode**

Options: Disable (default)
 Enable

Description: Reconfigures the soft starter's main contactor output (33, 34) for use as a shunt trip relay. When the soft starter trips on selected conditions, the relay will activate and the shunt trip will trigger the circuit breaker and disconnect mains voltage from the soft starter.

Use parameters 6C~6T to select which trips will activate the shunt trip relay.

**NOTE**

If shunt trip operation is enabled, the shunt trip relay will activate for certain non-adjustable trips as well as the selected adjustable trips.

- Current at Stop
- Current Read Err Lx
- EEPROM fail
- Firing Fail Px
- Instantaneous overcurrent
- Internal fault
- Motor connection
- SCR Itsm
- VZC Fail Px

9.15 30 Smart Card Parameters

Parameter groups 30 and higher are only visible if a smart card is installed and is supported by the soft starter. For parameter details, refer to the smart card user manual.

9.16 40 Ground Fault



NOTE

Ground fault protection is only available if a compatible expansion card is installed.

40A – Ground Fault Level

Range: 0 A - 50 A

Default: 0 A

Description: Sets the trip point for ground fault protection. A setting of 0 disables this protection.

40B – Ground Fault Delay

Range: 00:00 – 01:30 mm:ss

Default: 1 second

Description: Slows the EMX4e's response to ground fault variation, avoiding trips due to momentary fluctuations.

If the soft starter detects ground current above 50 A or more than 1.5 times the level set in parameter 40A, it will ignore the delay setting and trip within 1 second.

40C – Ground Fault Trip Active

Options: Always Active

A trip can occur at any time when the soft starter is receiving power.

Operating Only
(default)

A trip can occur while the soft starter is running, stopping or starting.

Run Only

A trip can only occur while the soft starter is running.

Description: Selects when a ground fault trip can occur.

40D – Ground Fault Action

Options: Soft Trip and Log (default)

Warn and Log

Soft Trip and Reset

Log Only

Trip Starter

Trip + Shunt Relay

Trip and Reset

Description: Selects the soft starter's response to the protection event.

40E – Ground Fault CT Ratio

Options: 1000:1 (default)
2000:1

Description: Set to match the ratio of the ground current measuring CT.

9.18 41 Calibrate 4-20mA**41A – 4 mA Calibration**

Range: 90% - 110% **Default:** 100%

Description: Calibrates the analog output to read exactly 4 mA when the motor is not running.

41B – 20 mA Calibration

Range: 90% - 110% **Default:** 100%

Description: Calibrates the analog output to read exactly 20 mA when the motor is running at full load current.

10. Troubleshooting

10.1 Protection responses

When a protection condition is detected, the EMX4e will write this to the event log and may also trip or issue a warning. The soft starter's response depends on the Protection Action setting (parameter group 6).

Some protection responses cannot be adjusted by the user. These trips are usually caused by external events (such as phase loss) or by a fault within the soft starter. These trips do not have associated parameters and cannot be set to Warn or Log.

If the EMX4e trips you will need to identify and clear the condition that triggered the trip, then reset the soft starter before restarting. To reset the starter, press the **RESET** button on the keypad or activate the Reset remote input.

If the EMX4e has issued a warning, the soft starter will reset itself once the cause of the warning has been resolved.

10.2 Trip messages


Display	Possible cause/Suggested solution
Bypass overload	This trip is not adjustable. Bypass overload protection protects the soft starter from severe operating overloads while running. The soft starter will trip if it detects overcurrent at 600% of the contactor rating. Related parameters: None
Current at Stop	The soft starter has detected current at a time when no current is expected (Ready, Not Ready or Tripped states). Related parameters: None
Current imbalance	Current imbalance can be caused by problems with the motor, the environment or the installation, such as: <ul style="list-style-type: none"> • An imbalance in the incoming mains voltage • A problem with the motor windings • A light load on the motor • A phase loss on input terminals L1, L2 or L3 during Run mode • An SCR that has failed open circuit. A failed SCR can only be definitely diagnosed by replacing the SCR and checking the starter's performance. Related parameters: 5A, 5B, 6C

Display	Possible cause/Suggested solution
Current Read Err Lx	Where 'X' is 1, 2 or 3. Internal fault (PCB fault). The output from the CT circuit is not close enough to zero when the SCRs are turned off. Contact your local supplier for advice. Related parameters: None
Depth Sensor	The smart card has detected a fault with the depth sensor. Related parameters: 30L, 36C
EEPROM fail	An error occurred loading data from the EEPROM to RAM when the keypad powered up. If the problem persists, contact your local distributor. Related parameters: None
Excess start time	Excess start time trip can occur in the following conditions: <ul style="list-style-type: none"> • parameter 1B <i>Motor Full Load Current</i> is not appropriate for the motor • parameter 2D <i>Current Limit</i> has been set too low • parameter 2B <i>Start Ramp Time</i> has been set greater than the setting for 5G <i>Excess Start Time</i> • parameter 2B <i>Start Ramp Time</i> is set too short for a high inertia load when using Adaptive Control Related parameters: 1B, 2B, 2D
Firing Fail Px	Where 'X' is phase 1, 2 or 3. The SCR did not fire as expected. The SCR may be faulty or there may be an internal wiring fault. Related parameters: None
Flow Sensor	The smart card has detected a fault with the flow sensor. Related parameters: 30E, 36B
Flow Switch	The flow switch sensor (smart card terminals C23, C24) has closed. Related parameters: 30E, 36H
Frequency	This trip is not adjustable. The mains frequency has gone beyond the specified range. Check for other equipment in the area that could be affecting the mains supply, particularly variable speed drives and switch mode power supplies (SMPS). If the EMX4e is connected to a generator set supply, the generator may be too small or could have a speed regulation problem. Related parameters: 6K

TROUBLESHOOTING

Display	Possible cause/Suggested solution
Heatsink overtemperature	<ul style="list-style-type: none"> • Check that bypass contactors are operating. • Check that cooling fans are operating (if fitted). • If mounted in an enclosure, check if ventilation is adequate. • The EMX4e must be mounted vertically. <p>Related parameters: None</p>
High Flow	<p>The flow sensor connected to the smart card has activated high flow protection.</p> <p>Related parameters: 30E, 30G, 30H, 31A, 31C, 31D, 36F</p>
High Pressure	<p>The pressure sensor connected to the smart card has activated high pressure protection.</p> <p>Related parameters: 30A, 30C, 30D, 32A, 32B, 32C, 36D</p>
Input A trip Input B trip	<p>The soft starter's programmable input is set to a trip function and has activated. Resolve the trigger condition.</p> <p>Related parameters: 7A, 7B, 7C, 7D, 7E, 7F, 7G, 7H</p>
Instantaneous overcurrent	<p>This trip is not adjustable.</p> <p>The current on all three phases has exceeded 7.2 times the value of parameter 1B <i>Motor Full Load Current</i>.</p> <p>Causes can include a locked rotor condition or an electrical fault in the motor or cabling.</p> <p>Related parameters: None</p>
Internal fault x	<p>Where 'X' is a number.</p> <p>This trip is not adjustable.</p> <p>The EMX4e has tripped on an internal fault. Contact your local supplier with the fault code (X).</p>
Internal fault 88	<p>The soft starter firmware does not match the hardware.</p>
Keypad disconnected	<p>Parameter 1A <i>Command Source</i> is set to Remote Keypad but the EMX4e cannot detect a remote keypad.</p> <p>If a remote keypad is installed, check the cable is firmly connected to the soft starter.</p> <p>If no remote keypad is installed, change the setting of parameter 1A.</p> <p>Related parameters: 1A</p>
L1 phase loss L2 phase loss L3 phase loss	<p>This trip is not adjustable.</p> <p>During pre-start checks the starter has detected a phase loss as indicated.</p> <p>In run state, the starter has detected that the current on the affected phase has dropped below 10% of the programmed motor FLC for more than 1 second, indicating that either the incoming phase or connection to the motor has been lost.</p> <p>Check the supply and the input and output connections at the starter and at the motor end.</p> <p>Related parameters: None</p>

Display	Possible cause/Suggested solution
L1-T1 shorted L2-T2 shorted L3-T3 shorted	During pre-start checks the starter has detected a shorted SCR or a short within the bypass contactor as indicated. Related parameters: 6S
Low Control Volts	The EMX4e has detected a drop in the internal control voltage. <ul style="list-style-type: none"> Check the external control supply (A1, A2, A3) and reset the starter. If the external control supply is stable: <ul style="list-style-type: none"> the 24 V supply on the main control PCB may be faulty; or the bypass driver PCB may be faulty. Contact your local supplier for advice. This protection is not active in Ready state. Related parameters: None
Low Flow	The flow sensor connected to the smart card has activated low flow protection. Related parameters: 30E, 30G, 30H, 31B, 31C, 31D, 36G
Low Pressure	The pressure sensor connected to the smart card has activated low pressure protection. Related parameters: 30A, 30C, 30D, 32D, 32E, 32F, 36E
Low Water	The depth sensor connected to the smart card has activated depth protection. Related parameters: 30L, 30N, 30O, 34A, 34B, 34C, 36I
Motor connection	This trip is not adjustable. <ul style="list-style-type: none"> Ensure the motor is connected to terminals T1, T2, T3 using in-line (three wire) connection. The EMX4e does not support inside delta (six wire) connection. If the soft starter is connected to a grounded delta mains supply, the starter may incorrectly detect the motor configuration. Set parameter 20F <i>Motor Connection</i> to 'In-line'. Related parameters: 20F
Motor Connection T1 Motor Connection T2 Motor Connection T3	This trip is not adjustable. The motor is not connected correctly to the soft starter. <ul style="list-style-type: none"> Check individual motor connections to the soft starter for power circuit continuity. Check connections at the motor terminal box. Related parameters: None

Display	Possible cause/Suggested solution
Motor overload	<p>The motor has reached its maximum thermal capacity. Overload can be caused by:</p> <ul style="list-style-type: none"> • The soft starter protection settings not matching the motor thermal capacity • Excessive starts per hour or start duration • Excessive current • Damage to the motor windings <p>Resolve the cause of the overload and allow the motor to cool. Related parameters: 1B, 1C, 1D, 1E, 5G, 6F</p> <p> NOTE Parameters 1C, 1D and 1E determine the trip current for motor overload protection. The default settings of parameters 1C, 1D and 1E provide Motor Overload Protection: Class 10, Trip Current 105% of FLA (full load amperage) or equivalent.</p>
Motor thermistor	<p>The motor thermistor input has been enabled and:</p> <ul style="list-style-type: none"> • The resistance at the thermistor input has exceeded 3.6 kΩ for more than one second. • The motor winding has overheated. Identify the cause of the overheating and allow the motor to cool before restarting. • The motor thermistor input has been opened. <p>If thermistors have previously been connected to the EMX4e but are no longer required, use the Thermistor Reset function to disable the thermistor. Related parameters: 6M</p>
Network communication	<p>There is a network communication problem, or the network master may have sent a trip command to the starter. Check the network for causes of communication inactivity. Related parameters: 6I</p>
Not ready	<ul style="list-style-type: none"> • The reset input may be active. If the reset input is active, the starter will not operate. • The soft starter may be waiting for the restart delay to elapse. The length of the restart delay is controlled by parameter 5H <i>Restart Delay</i>. <p>Related parameters: 5H</p>
Overcurrent	<p>The current has exceeded the level set in parameter 5E <i>Overcurrent</i> for longer than the time set in parameter 5F <i>Overcurrent Delay</i>. Causes can include a momentary overload condition. Related parameters: 5E, 5F, 6E</p>

Display	Possible cause/Suggested solution
Parameter out of range	<p>This trip is not adjustable.</p> <ul style="list-style-type: none"> • A parameter value is outside the valid range. The keypad will indicate the first invalid parameter. • An error occurred loading data from the EEPROM to RAM when the keypad powered up. • The parameter set or values in the keypad do not match the parameters in the starter. • "Load User Set" has been selected but no saved file is available. <p>Reset the fault. The starter will load the default settings. If the problem persists, contact your local distributor.</p> <p>Related parameters: None</p>
Phase sequence	<p>The phase sequence on the soft starter's input terminals (L1, L2, L3) is not valid.</p> <p>Check the phase sequence on L1, L2, L3 and ensure the setting in parameter 5J is suitable for the installation.</p> <p>Related parameters: 5J, 6L</p>
Power loss	<p>This trip is not adjustable.</p> <p>The starter is not receiving mains supply on one or more phases when a Start Command is given.</p> <p>Check that the main contactor closes when a start command is given, and remains closed until the end of a soft stop. Check the fuses. If testing the soft starter with a small motor, it must draw at least 10% of the starter's programmed FLC setting on each phase.</p> <p>If shunt relay mode is enabled (parameter 20G <i>Shunt Trip Mode</i>), certain trips may cause the shunt relay to open the circuit breaker.</p> <p>Related parameters: None</p>
Pressure Sensor	<p>The smart card has detected a fault with the pressure sensor.</p> <p>Related parameters: 30A, 36A</p>
Rating Capacity	<p>The EMX4e is operating beyond its safe capacity. Allow the starter to cool.</p> <p>Related parameters: None</p>
RTD Circuit	<p>The smart card has detected a fault with the RTD sensor, or the RTD has activated temperature protection.</p> <p>Related parameters: 35B, 36J</p>
SCR Itsm	<p>The SCR current surge rating has been exceeded.</p> <p>Related parameters: None</p>


TROUBLESHOOTING

Display	Possible cause/Suggested solution
SCR overtemperature	<p>The temperature of the SCRs, calculated by the thermal model, is too high to allow further operation. Wait for the starter to cool.</p> <p>Related parameters: None</p>
Starter communication	<p>There is a problem with the connection between the soft starter and the optional expansion card. Remove and reinstall the card. If the problem persists, contact your local distributor.</p> <p>Related parameters: None</p>
Starts per hour	<p>The soft starter has already attempted the maximum number of starts in the last 60 minutes. Wait before attempting another start.</p> <p>To determine when the waiting period will end, review the log.</p> <p>Related parameters: 5I</p>
Thermistor circuit	<p>The thermistor input has been enabled and:</p> <ul style="list-style-type: none"> • The resistance at the input has fallen below 20 Ω (the cold resistance of most thermistors will be over this value) or • A short circuit has occurred. Check and resolve this condition. <p>Related parameters: None</p>
Time-overcurrent	<p>The EMX4e is internally bypassed and has drawn high current during running. (The 10A protection curve trip has been reached or the motor current has risen to 600% of the motor FLC setting.)</p> <p>Related parameters: None</p>
Undercurrent	<p>The motor has experienced a sharp drop in current, caused by loss of load. Causes can include broken components (shafts, belts or couplings), or a pump running dry.</p> <p>Related parameters: 5C, 5D, 6D</p>
VZC Fail Px	<p>Where 'X' is 1, 2 or 3.</p> <p>Internal fault (PCB fault). Contact your local supplier for advice.</p> <p>Related parameters: None</p>

10.3 General faults

This table describes situations where the soft starter does not operate as expected but does not trip or give a warning.

Symptom	Probable Cause
Starter "Not Ready"	<ul style="list-style-type: none"> The reset input may be active. If the reset input is active, the starter will not operate.
"Simul" on display	<ul style="list-style-type: none"> The starter is running simulation software. This software is intended for demonstration purposes only and is not suitable for controlling a motor. Contact your local supplier for advice.
The soft starter does not respond to the START or RESET button on the keypad.	<ul style="list-style-type: none"> The soft starter will only accept commands from the keypad if parameter 1A <i>Command Source</i> is set to Remote Keypad. Check that the Local LED on the starter is on.
The soft starter does not respond to commands from the control inputs.	<ul style="list-style-type: none"> The soft starter will only accept commands from the inputs if parameter 1A <i>Command Source</i> is set to Digital Input. Check the setting of 1A. The control wiring may be incorrect. Check that the remote start, stop and reset inputs are configured correctly (refer to <i>Start/Stop</i> on page 24 for details). The signals to the remote inputs may be incorrect. Test the signalling by activating each input signal in turn.
The soft starter does not respond to a start command from either the keypad or the digital inputs.	<ul style="list-style-type: none"> The soft starter may be waiting for the restart delay to elapse. The length of the restart delay is controlled by parameter 5H <i>Restart Delay</i>. The motor may be too hot to permit a start. The soft starter will only permit a start when it calculates that the motor has sufficient thermal capacity to complete the start successfully. Wait for the motor to cool before attempting another start. The reset input may be active. If the reset input is active, the starter will not operate. The soft starter may be waiting for control signals via the communications network (parameter 1A <i>Command Source</i> = Network).
Remote keypad shows message "awaiting data"	The keypad is not receiving data from the control PCB. Check the cable connection.
The soft starter does not control the motor correctly during starting.	<ul style="list-style-type: none"> Start performance may be unstable when using a low <i>Motor Full Load Current</i> setting (parameter 1B).

Symptom	Probable Cause
	<ul style="list-style-type: none"> Power factor correction (PFC) capacitors must be installed on the supply side of the soft starter and must be disconnected during starting and stopping. To use the EMX4e to control power factor correction, connect the PFC contactor to a programmable relay set to Run. High levels of harmonics on the mains supply can affect soft starter performance. If variable speed drives are installed nearby, check they are properly grounded and filtered.
Motor does not reach full speed.	<ul style="list-style-type: none"> If the start current is too low, the motor will not produce enough torque to accelerate to full speed. The soft starter may trip on excess start time. <p> NOTE Make sure the motor starting parameters are appropriate for the application and that you are using the intended motor starting profile. If a programmable input is set to Motor Set Select, check that the corresponding input is in the expected state.</p> <ul style="list-style-type: none"> The load may be jammed. Check the load for severe overloading or a locked rotor situation.
Soft stop ends too quickly.	<ul style="list-style-type: none"> The soft stop settings may not be appropriate for the motor and load. Review the soft stop settings. If the motor is very lightly loaded, soft stop will have limited effect.
After selecting Adaptive Control the motor used an ordinary start and/or the second start was different to the first.	<ul style="list-style-type: none"> The first Adaptive Control start is actually 'Constant Current' so that the starter can learn from the motor characteristics. Subsequent starts use Adaptive Control.
Parameter settings cannot be stored.	<ul style="list-style-type: none"> Make sure you are saving the new value by pressing the STORE button after adjusting a parameter setting. If you press EXIT, the change will not be saved. The EMX4e does not display a confirmation. Check that the adjustment lock (parameter 10G) is set to Read & Write. If the adjustment lock is set to Read Only, settings can be viewed but not changed.
USB Full	<ul style="list-style-type: none"> The USB drive may not have enough free space available for the selected function.

Symptom	Probable Cause
	<ul style="list-style-type: none"> The file system on the USB drive may not be compatible with the soft starter. The EMX4e supports FAT32 file systems. The EMX4e's USB functions are not compatible with NTFS file systems.
USB Missing	A USB function has been selected in the menu, but the product cannot detect a USB drive. Check that the USB drive has been inserted in the port.
File Missing	<p>A USB function has been selected in the menu, but the required file cannot be found.</p> <p>Save/Load Master Parameters uses a file called Master_Parameters.par, at the top level of the USB drive. For these functions to work correctly, do not move or rename this file.</p>
File Not Valid	A USB function has been selected in the menu, but the file is not valid.
File Empty	A USB function has been selected in the menu and the file has been found, but does not contain the expected content.
Rating Not Valid	The value selected for parameter 20D <i>Model Rating</i> does not match the soft starter. Set parameter 20D to match the rating shown on the EMX4e nameplate label (on the side of the unit).



BENSHAW
Applied Motor Controls

BENSHAW
615 Alpha Drive
Pittsburgh, PA 15238
Phone: (412) 968-0100
Fax: (412) 968-5415

BENSHAW Canada
550 Bright Street
Listowel, Ontario N4W 3W3
Phone: (519) 291-5112
Fax: (519) 291-2595



7 10-21918-00C